

PROJECT	CUSTOMER	VEHICLE
X'trapolis-PRASA	PRASA	235 – M1 – VFT

RTR Vehicle Functional Static Testing TS235 M1 Report
GIB0000006951



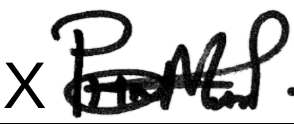 
	CREATED	VERIFIED	APPROVED	DISTRIBUTION
Name	Nhlakanipho MASONDO	Sifiso LUKHELE	Kgomotso NKOANA	Confidentiality Category <i>Restricted</i> <i>Project</i> <i>Normal</i> ☐ ☐ ☒
Date	23/07/2024	23/07/2024	23/07/2024	Control Category <i>Controlled</i> <i>Not Controlled</i> ☒ ☐
Signature				Language EN

This report has been automatically generated from TES version 1.

Table of modifications

Rev	Date	Modifications Content	Writer
A0	23/07/2024	Creation	Nhlakanipho MASONDO

Internal validations

	Name	Function	Date	Signature
Creator	Nhlakanipho MASONDO	EPU Manager	23/07/2024	X  Nhlakanipho MASONDO EPU Manager
Verifier	Sifiso LUKHELE	Serial Test Manager	23/07/2024	X  Sifiso LUKHELE Serial Test Manager
Approver	Kgomotso NKOANA	Test Expert	23/07/2024	X  Kgomotso NKOANA Test Expert

Execution Plan

Start Date	16/07/2024
End Date	20/07/2024

Contents

Section 1 - Purpose / Objectives

Section 2 - Energy Distribution

2.1 Instructions list

Section 3 - TCMS Network

3.1 Instructions list

Section 4 - Cabin Control

4.1 Instructions list

Section 5 - Internal Lighting

5.1 Instructions list

Section 6 - Train-Ground Communication

6.1 Instructions list

Section 7 - Pantograph

7.1 Instructions list

Section 8 - Rescue Mode and Emergency Disconnection

8.1 Instructions list

Section 9 - Emergency Brake

9.1 Instructions list

Section 10 - Service Brake

10.1 Instructions list

Section 11 - Holding and Parking Brake

11.1 Instructions list

Section 12 - Passenger Doors

12.1 Instructions list

Section 13 - Air Conditioning

13.1 Instructions list

Section 14 - Fire protection

14.1 Instructions list

Section 15 - Traction and Electric Brake

15.1 Instructions list

Section 16 - Vehicle Normalization

16.1 Instructions list

Section 17 - PACIS Network

17.1 Instructions list

Section 18 - Report summaries

18.1 Results status

18.2 Tools used



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 1 – Purpose / Objectives

1. Energy Distribution

Ensure the distribution of 110Vdc and 400Vac through the vehicle from the battery and Auxiliary converter

2. TCMS Network

Verify the working of the TCMS network and its core elements, i.e. TRS, CRS.

3. Cabin Control

Verify the cabin control functions in both normal and backup modes, their commanding of the train lines, and the TCMS response to each function.

4. Internal Lighting

Verify the working of all internal lighting functions.

5. PACIS System

Verify power supply to all PACIS network equipment.

6. Train-Ground Communication

Setup the Train-to-ground systems and verify correct installation of the antennas by VSWR test.

7. Pantograph

The objective of this procedure is to ensure the correct control and operation of the pantograph.

8. Rescue Mode and Emergency Disconnection

The objective of this procedure is to verify the correct operation of the emergency disconnection function, as well as the correct activation of the Back-Up mode.

10. Emergency Brake

The objective of this procedure is to verify all electrical components of the Emergency braking system.

11. Service Brake

The objective of this procedure is to verify all electrical components of the Service brake system.

12. Holding and Parking Brake

The objective of this procedure is to verify all electrical components of the Parking/holding brake system.

13. Passenger Doors

The objective of this procedure is to ensure the proper operation of the train doors.

14. Air Conditioning

Verify the voltage distribution to and correct operation of the HVAC system

15. Fire protection

The objective of this procedure is to verify the configuration of the fire detection units, as well as the presence of the safety resistor in the auxiliary converter.

16. Traction and Electric Brake

Verify all the train lines associated with the traction and electric brake systems of the train

18. Vehicle Normalization

The objective of this procedure is to ensure that all connectors, panels and covers are normalized.



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 2 – Energy Distribution

2.1 Instructions list

2.1.1 015_NRG-Energy Distribution

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Energy Distribution (SPP=015)		OK		Siphesihle Mchunu - 491465	M1
10002	I	Initial Conditions		OK		Siphesihle Mchunu - 491465	M1
10003	I	All the Circuit Breakers should be OPEN		OK		Siphesihle Mchunu - 491465	M1
10004	I	Test bench should be connected with no active output voltage		OK		Siphesihle Mchunu - 491465	M1
10005	I	NO 400Vac should be connected to the car		OK		Siphesihle Mchunu - 491465	M1
10006	I	110Vdc Circuit Breaker		OK		Siphesihle Mchunu - 491465	M1
10007	A	Close Circuit Breaker 15Q3 (Normal Line)		OK		Siphesihle Mchunu - 491465	M1
10008	I	230Vac and 400Vac Circuit breakers		OK		Siphesihle Mchunu - 491465	M1
10009	A	Close Circuit Breaker 13Q1		OK		Siphesihle Mchunu - 491465	M1
10010	I	Normal and Permanent Power Supply		OK		Siphesihle Mchunu - 491465	M1
10011	I	110Vdc Permanent Train Line Dev1/40 = END1 90XP24 pin 29 Dev5/40 = END2 90XP34 pin 29		OK		Siphesihle Mchunu - 491465	M1
10012	A	Force [NI] Dev1/40 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10013	R	Read Defined Variable [NI] Dev5/40 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10014	A	Apply 110Vdc on the Normal Line using the external power supply		OK		Siphesihle Mchunu - 491465	M1
10015	A	Measure 110Vdc between 90XR50.X1/1 (+) and 90XR50.X2/1 (-) (intercar connector). [Normal line]		OK		Siphesihle Mchunu - 491465	M1
10016	I	Permanent Line Circuit Breakers		OK		Siphesihle Mchunu - 491465	M1
10017	A	Check for battery voltage (above 80Vdc) on Circuit Breaker 15Q4 and close it (permanent Line)		OK		Siphesihle Mchunu - 491465	M1
10018	I	230Vac Circuit Breakers		OK		Siphesihle Mchunu - 491465	M1

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

10019	A	Close Circuit Breaker 13Q2		OK		Siphehile Mchunu - 491465	M1
10020	A	Close Circuit Breaker 13Q3		OK		Siphehile Mchunu - 491465	M1
10021	I	230Vac and 400Vac Voltage Supply		OK		Siphehile Mchunu - 491465	M1
10022	A	Apply 400Vac to the Vehicle on End 1 or End 2		OK		Siphehile Mchunu - 491465	M1
10023	A	Perform a phase rotation measurement on Connector 90XR62 between phases U(X3), V(X2), W(X1) and ensure the rotation is in the correct direction		OK		Siphehile Mchunu - 491465	M1
10024	R	Phase rotation between U, V, W is correct		OK		Siphehile Mchunu - 491465	M1
10025	A	Perform a phase rotation measurement on Connector 90XR52_1 between phases U(X1), V(X2), W(X3) and ensure the rotation is in the correct direction		OK		Siphehile Mchunu - 491465	M1
10026	R	Phase rotation between U, V, W is correct		OK		Siphehile Mchunu - 491465	M1
10027	A	Check 230Vac between points L and N of socket -13XT1		OK		Siphehile Mchunu - 491465	M1
10028	R	230Vac present		OK		Siphehile Mchunu - 491465	M1
10029	A	Check 230Vac between points L and N of socket -13XT2		OK		Siphehile Mchunu - 491465	M1
10030	R	230Vac present		OK		Siphehile Mchunu - 491465	M1
10031	A	Remove the connector 57XP1_10		OK		Siphehile Mchunu - 491465	M1
10032	A	Remove the connector 93XP150		OK		Siphehile Mchunu - 491465	M1
10033	A	Close the circuit breaker 34Q1 and 57Q1		OK		Siphehile Mchunu - 491465	M1
10034	A	Check 400Vac +-5% tolerance between Phases (W, V, U) on connector 57XP1_10 (10b1,10a2,10a1)		OK		Siphehile Mchunu - 491465	M1
10035	R	400Vac +- 5% tolerance is measured between all three phases on connector 93XP150 (E2, E3, E1)		OK		Siphehile Mchunu - 491465	M1
10036	A	Check 400Vac +-5% tolerance between Phases (W, V, U) on connector 93XP150		OK		Siphehile Mchunu - 491465	M1
10037	R	400Vac +- 5% tolerance is measured between all three phases on circuit breaker 57Q1		OK		Siphehile Mchunu - 491465	M1

10038	A	Put back the connector 57XP1_10		OK		Siphesihle Mchunu - 491465	M1
10039	A	Put back the connector 93XP150		OK		Siphesihle Mchunu - 491465	M1
10040	I	Auxiliary Converters Command		OK		Siphesihle Mchunu - 491465	M1
10041	I	Battery Connection Train Lines Dev1/79 = END 1 90XR24 pin 30 Dev5/79 = END 2 90XP34 pin 30		OK		Siphesihle Mchunu - 491465	M1
10042	A	Force [NI] Dev1/79 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10043	R	Read Defined Variable [NI] Dev5/79 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10044	A	Force [NI] Dev1/79 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10045	R	Read Defined Variable [NI] Dev5/79 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10046	I	Battery Disconnection Train Lines Dev1/75 = END 1 90XR24 pin 31 Dev5/75 = END 2 90XP34 pin 31		OK		Siphesihle Mchunu - 491465	M1
10047	A	Force [NI] Dev1/75 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10048	R	Read Defined Variable [NI] Dev5/75 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10049	A	Force [NI] Dev1/75 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10050	R	Read Defined Variable [NI] Dev5/75 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10051	I	IES StatusTrain Lines Dev1/86 = END 1 90XR25 pin 61 Dev2/87 = END 1 90XR25 pin 62		OK		Siphesihle Mchunu - 491465	M1
10052	A	Force [NI] Dev1/86 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10053	R	Read Defined Variable [NI] Dev2/87 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10054	A	Force [NI] Dev1/86 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10055	R	Read Defined Variable [NI] Dev2/87 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10056	I	Switch off the 400Vac power supply at the socket		OK		Siphesihle Mchunu - 491465	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 3 – TCMS Network

3.1 Instructions list

3.1.1 025_NET-TCMS Network

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	TCMS Network Io (SPP=25)		OK		Anthonia Mabowa - 494131	M1
10002	I	Initial conditions		OK		Anthonia Mabowa - 494131	M1
10003	I	Vehicle test bench should be configured as TC1: 1. TC1 Dataplugs 2. MCE switch set to TC1		OK		Anthonia Mabowa - 494131	M1
10004	R	On DDU TCMS screen the TC1 cab is in BLUE colour		OK		Anthonia Mabowa - 494131	M1
10005	I	Power Supply to the Router Switches		OK		Anthonia Mabowa - 494131	M1
10006	I	Power supply to the 25A10 SWITCH ETHERNET (CRS1)		OK		Anthonia Mabowa - 494131	M1
10007	A	Close Circuit Breaker 25Q10		OK		Anthonia Mabowa - 494131	M1
10008	R	CRS1 25A10 is ON		OK		Anthonia Mabowa - 494131	M1
10009	I	Power supply to the 25A11 SWITCH ETHERNET (CRS2)		OK		Anthonia Mabowa - 494131	M1
10010	A	Close Circuit Breaker 25Q11		OK		Anthonia Mabowa - 494131	M1
10011	R	CRS2 25A11 is ON		OK		Anthonia Mabowa - 494131	M1
10012	I	Power supply to the 25A14 ETHERNET REPEATER (TBR)		OK		Anthonia Mabowa - 494131	M1
10013	A	Close Circuit Breaker 25Q14		OK		Anthonia Mabowa - 494131	M1
10014	R	TBR 25A14 is ON		OK		Anthonia Mabowa - 494131	M1
10015	A	Close Circuit Breaker 25Q6		OK		Anthonia Mabowa - 494131	M1

10016	A	Close Circuit Breaker 25Q7		OK		Anthonia Mabowa - 494131	M1
10017	I	Ethernet Loop		OK		Anthonia Mabowa - 494131	M1
10018	A	For each CRS, check that the Ethernet Loop LEDs are flashing		OK		Anthonia Mabowa - 494131	M1
10019	R	CRS1 has LEDs on ports X3 and X4 flashing		OK		Anthonia Mabowa - 494131	M1
10020	R	CRS2 has ONLY LED on port X4 flashing		OK		Anthonia Mabowa - 494131	M1
10021	R	Check on the Test Bench DDU that all Router Switches are available on the network		OK		Anthonia Mabowa - 494131	M1
10022	I	Power Supply to the BRIOMS		OK		Anthonia Mabowa - 494131	M1
10023	I	Power supply to the 25A6 BRIOM 40/10 ETH 6		OK		Anthonia Mabowa - 494131	M1
10024	R	BRIOM 25A6 is ON		OK		Anthonia Mabowa - 494131	M1
10025	A	Check visually that ground braid is connected to BRIOM		OK		Anthonia Mabowa - 494131	M1
10026	I	Power supply to the 25A7 BRIOM 40/10 ETH 7		OK		Anthonia Mabowa - 494131	M1
10027	R	BRIOM 25A7 is ON		OK		Anthonia Mabowa - 494131	M1

Section 4 – Cabin Control

4.1 Instructions list

4.1.1 020_CAB-Cabin Control

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Cabin Control (SPP=020)		OK		Sicelo Mtolo - 525130	M1
10002	I	Train Lines		OK		Sicelo Mtolo - 525130	M1
10003	I	Cab Selected on Train Lines Dev1/1 = END1 90XR24 pin 3 Dev5/1 = END2 90XP34 pin 3		OK		Sicelo Mtolo - 525130	M1
10004	A	Force [NI] Dev1/1 = 1.0		OK		Sicelo Mtolo - 525130	M1
10005	R	Read Defined Variable [NI] Dev5/1 = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10006	A	Force [NI] Dev1/1 = 0.0		OK		Sicelo Mtolo - 525130	M1
10007	R	Read Defined Variable [NI] Dev5/1 = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10008	I	Cab Active TC1 Train Lines Dev1/2 = END1 90XR24 pin 4 Dev5/2 = END2 90XP34 pin 4		OK		Sicelo Mtolo - 525130	M1
10009	A	Force [NI] Dev1/2 = 1.0		OK		Sicelo Mtolo - 525130	M1
10010	R	Read Defined Variable [NI] Dev5/2 = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10011	A	Force [NI] Dev1/2 = 0.0		OK		Sicelo Mtolo - 525130	M1
10012	R	Read Defined Variable [NI] Dev5/2 = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10013	I	Master Key TC1 Train Lines Dev1/73 = END1 90XR24 pin 17 Dev5/73 = END2 90XP34 pin 14		OK		Sicelo Mtolo - 525130	M1
10014	A	Force [NI] Dev1/73 = 1.0		OK		Sicelo Mtolo - 525130	M1
10015	R	Read Defined Variable [NI] Dev5/73 = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10016	A	Force [NI] Dev1/73 = 0.0		OK		Sicelo Mtolo - 525130	M1

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

10017	R	Read Defined Variable [NI] Dev5/73 = 0.0		OK	0	Sicelo Mtolo - 525130	M1
-------	---	--	--	----	---	-----------------------	----

Section 5 – Internal Lighting

5.1 Instructions list

5.1.1 052_LGT-Internal Lighting

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Internal Lighting (SPP=052)		OK		Sicelo Mtolo - 525130	M1
10002	I	Initial Conditions		OK		Sicelo Mtolo - 525130	M1
10003	I	The 110Vdc Normal line is ON		OK		Sicelo Mtolo - 525130	M1
10004	I	Cleaning Lighting Command		OK		Sicelo Mtolo - 525130	M1
10005	I	110Vdc Permanent Train Line Dev1/40 = END1 90XR24 pin 29		OK		Sicelo Mtolo - 525130	M1
10006	A	Force [NI] Dev1/40 = 1.0		OK		Sicelo Mtolo - 525130	M1
10007	A	Close Circuit Breaker 52Q5		OK		Sicelo Mtolo - 525130	M1
10008	A	Close Circuit Breaker 52Q3		OK		Sicelo Mtolo - 525130	M1
10009	A	Close Circuit Breaker 52Q4		OK		Sicelo Mtolo - 525130	M1
10010	I	Lighting 33% Train Line Dev1/8 = END1 90XR25 pin 27		OK		Sicelo Mtolo - 525130	M1
10011	A	Force [NI] Dev1/8 = 1.0		OK		Sicelo Mtolo - 525130	M1
10012	R	The saloon RIGHT side emergency lights (low intensity) are ON on all light modules		OK		Sicelo Mtolo - 525130	M1
10013	R	The saloon LEFT side emergency lights (low intensity) are ON on all light modules		OK		Sicelo Mtolo - 525130	M1
10014	I	Lighting 33% Train Line Dev5/8 = END2 90XP35 pin 27		OK		Sicelo Mtolo - 525130	M1
10015	R	Read Defined Variable [NI] Dev5/8 = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10016	I	Lighting 33% Train Line Dev1/8 = END1 90XR25 pin 27		OK		Sicelo Mtolo - 525130	M1
10017	A	Force [NI] Dev1/8 = 0.0		OK		Sicelo Mtolo - 525130	M1
10018	I	Lighting 33% Train Line Dev5/8 = END2 90XP35 pin 27		OK		Sicelo Mtolo - 525130	M1
10019	R	Read Defined Variable [NI] Dev5/8 = 0.0		OK	0	Sicelo Mtolo - 525130	M1

10020	R	All saloon emergency lights (low intensity) are OFF on all light modules (Left+Right)		OK		Sicelo Mtolo - 525130	M1
10021	A	Turn Cleaning Staff Lights Switch 52S6 to ON position		OK		Walter Sigudla - 486333	M1
10022	I	Lighting 33% Train Line Dev5/8 = END2 90XP35 pin 27		OK		Sicelo Mtolo - 525130	M1
10023	R	Read Defined Variable [NI] Dev5/8 = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10024	R	All saloon emergency lights (low intensity) are ON on all light modules (Left+Right)		OK		Sicelo Mtolo - 525130	M1
10025	A	Reset Circuit Breaker 52Q5 (Open and Close)		OK		Sicelo Mtolo - 525130	M1
10026	R	Read Defined Variable [NI] Dev5/8 = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10027	I	Main Lighting Command		OK		Sicelo Mtolo - 525130	M1
10028	A	Close Circuit Breaker 52Q1		OK		Sicelo Mtolo - 525130	M1
10029	A	Close Circuit Breaker 52Q2		OK		Sicelo Mtolo - 525130	M1
10030	R	All saloon emergency lights (low intensity) are ON on all light modules (Left+Right)		OK		Sicelo Mtolo - 525130	M1
10031	I	Lighting 33% Train Line Dev5/8 = END2 90XP25 pin 27		OK		Sicelo Mtolo - 525130	M1
10032	R	Read Defined Variable [NI] Dev5/8 = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10033	I	Main Lighting Command Train Line Dev1/32 = END1 90XR25 pin 26		OK		Sicelo Mtolo - 525130	M1
10034	A	Force [NI] Dev1/32 = 1.0		OK		Sicelo Mtolo - 525130	M1
10035	I	Main Lighting Command Train Line Dev5/24 = END2 90XP35 pin 26		OK		Sicelo Mtolo - 525130	M1
10036	R	Read Defined Variable [NI] Dev5/24 = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10037	R	The saloon LEFT side main lighting (high intensity) is ON on all light modules		OK		Sicelo Mtolo - 525130	M1
10038	R	The saloon RIGHT side main lighting (high intensity) is ON on all light modules		OK		Sicelo Mtolo - 525130	M1
10039	I	Main Lighting Command Train Line Dev1/32 = END1 90XR25 pin 26		OK		Sicelo Mtolo - 525130	M1
10040	A	Force [NI] Dev1/32 = 0.0		OK		Sicelo Mtolo - 525130	M1



10041	R	All saloon emergency lights (low intensity) are ON on all light modules (Left+Right)		OK		Sicelo Mtolo - 525130	M1
-------	---	--	--	----	--	-----------------------	----



Serial Tests Report TS235 – M1 – VFT RTR Vehicle Functional Static Testing Report	Document Reference GIB0000006951 Version: A0	Emission date 23/07/2024
---	--	-----------------------------

Section 6 – Train-Ground Communication

6.1 Instructions list

6.1.1 062_ETS-ERTMS

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	ERTMS (SPP=062)		OK		Walter Sigudla - 486333	M1
10002	I	ERTMS Bypass Train Lines Dev1/33 = END1 90XR24 pin 11 Dev5/37 = END2 90XP34 pin 11		OK		Anthonia Mabowa - 494131	M1
10003	A	Force [NI] Dev1/33 = 1.0		OK		Anthonia Mabowa - 494131	M1
10004	R	Read Defined Variable [NI] Dev5/37 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10005	A	Force [NI] Dev1/33 = 0.0		OK		Anthonia Mabowa - 494131	M1
10006	R	Read Defined Variable [NI] Dev5/37 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10007	I	Emergency Brake ERTMS 1 Train Lines Dev1/88 = END1 90XR24 pin 18 Dev5/88 = END2 90XP34 pin 18		OK		Anthonia Mabowa - 494131	M1
10008	A	Force [NI] Dev1/88 = 1.0		OK		Anthonia Mabowa - 494131	M1
10009	R	Read Defined Variable [NI] Dev5/88 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10010	A	Force [NI] Dev1/88 = 0.0		OK		Anthonia Mabowa - 494131	M1
10011	R	Read Defined Variable [NI] Dev5/88 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10012	I	Emergency Brake ERTMS 2 Train Lines Dev1/80 = END1 90XR24 pin 20 Dev5/80 = END2 90XP34 pin 20		OK		Anthonia Mabowa - 494131	M1
10013	A	Force [NI] Dev1/80 = 1.0		OK		Anthonia Mabowa - 494131	M1
10014	R	Read Defined Variable [NI] Dev5/80 = 1.0		OK	1	Anthonia Mabowa - 494131	M1

10015	A	Force [NI] Dev1/80 = 0		OK		Anthonia Mabowa - 494131	M1
10016	R	Read Defined Variable [NI] Dev5/80 = 0		OK	0	Anthonia Mabowa - 494131	M1
10017	I	Wheel Sensor Continuity Test		OK		Anthonia Mabowa - 494131	M1
10018	I	Use the multi-meter to test the continuity		OK		Anthonia Mabowa - 494131	M1
10019	A	Check continuity between [62B1 WHEEL SENSOR (Local: +MB2; Connector 62XP1_1) and Intercar (Local: +END2; connector 90XP33.c)]		OK		Anthonia Mabowa - 494131	M1
10020	R	There is a continuity between: pin B & pin 2, pin A & pin 1, pin C & pin 7, pin D & pin 8		OK		Anthonia Mabowa - 494131	M1
10021	R	There is a continuity between: pin F & pin 4, pin E & pin 3, pin G & pin 9, pin H & pin 10		OK		Anthonia Mabowa - 494131	M1
10022	R	There is a continuity between: pin L & pin 6, pin K & pin 5, pin M & pin 11, pin N & pin 12		OK		Anthonia Mabowa - 494131	M1
10023	I	Eurobalise Antenna Cable		OK		Anthonia Mabowa - 494131	M1
10024	A	Check continuity between [Intercar (LOCAL: +END1; Connector -90XR20) and Intercar (LOCAL: +END2; connector - 90XP30)] according to the image below		OK		Anthonia Mabowa - 494131	M1
10025	R	Eurobalise Antenna cable is correctly configured		OK		Anthonia Mabowa - 494131	M1

6.1.2 064_COM-Train-Ground Communication

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Train-Ground Communication (SPP=064)		OK		Anthonia Mabowa - 494131	M1
10002	A	Using the tool list on the side of your screen, note the serial number of the antenna cable tester used in this procedure		OK		Anthonia Mabowa - 494131	M1
10003	I	Antenna cable tester Calibration		OK		Anthonia Mabowa - 494131	M1
10004	I	PERFORM THIS CALIBRATION BEFORE TESTING EACH CABLE		OK		Anthonia Mabowa - 494131	M1
10005	A	Select "preset", then set the test frequency by selecting "FREQ/DIST" then setting the start and stop frequency, select "calibrate", then "Full 1-port" then Calibrate the Antenna cable tester using the 0.5m extension cable and the T-calibration unit.		OK		Anthonia Mabowa - 494131	M1
10006	I	GSM Cable		OK		Anthonia Mabowa - 494131	M1
10007	A	Ensure the frequency range is 876MHz - 961.34MHz; Connect the GSM cable of the Netbox to the measuring cable and note the resulting waveform		OK		Anthonia Mabowa - 494131	M1
10008	R	The maximum peak of the waveform is Result Max: x <= 2.13 ()		OK	1.66	Anthonia Mabowa - 494131	M1
10009	A	Save the waveform result with the following name: TS# (#-Train number) _NBX_ GSM1		OK		Anthonia Mabowa - 494131	M1
10010	A	Recalibrate the tester. Ensure the frequency range is 1.71GHz - 1.88Ghz; Connect the GSM cable of the Netbox to the measuring cable and note the resulting waveform		OK		Anthonia Mabowa - 494131	M1
10011	R	The maximum peak of the waveform is Result Max: x <= 2.13 ()		OK	1.98	Anthonia Mabowa - 494131	M1
10012	A	Save the waveform result with the following name: TS# (#-Train number) _NBX_ GSM2		OK		Anthonia Mabowa - 494131	M1
10013	I	GPS Cable		OK		Anthonia Mabowa - 494131	M1

10014	A	Recalibrate the tester. Ensure the frequency range is 1200MHz - 1600MHz; Connect the GPS cable of the Netbox to the measuring cable and note the resulting waveform		OK		Anthonia Mabowa - 494131	M1
10015	A	On the cable tester, select "MEAS" and select F1 "Distance to Fault"		OK		Anthonia Mabowa - 494131	M1
10016	I	Ensure that the resulting waveform is such as in the picture on the right. The peak of the graph should be at a point >8m; before that, the graph should be flat. Maximum value before the peak should be 1.2		OK		Anthonia Mabowa - 494131	M1
10017	R	The maximum peak of the waveform is Result Max: x <= 1.2 ()		OK	1.01	Anthonia Mabowa - 494131	M1
10018	A	Save the waveform result with the following name: TS# (#-Train number) _NBX_ GPS		OK		Anthonia Mabowa - 494131	M1
10019	I	Wi-Fi Cable		OK		Anthonia Mabowa - 494131	M1
10020	A	Recalibrate the tester. Ensure the frequency range is 1710MHz - 2700MHz; Connect the Wi-Fi cable of the Netbox to the measuring cable and note the resulting waveform		OK		Anthonia Mabowa - 494131	M1
10021	R	The maximum peak of the waveform is Result Max: x <= 2.45 ()		OK	1.22	Anthonia Mabowa - 494131	M1
10022	A	Save the waveform result with the following name: TS# (#-Train number) _NBX_ WiFi1		OK		Anthonia Mabowa - 494131	M1
10023	A	Recalibrate the tester. Ensure the frequency range is 4.9GHz - 5.935GHz;		OK		Anthonia Mabowa - 494131	M1
10024	R	The maximum peak of the waveform is Result Max: x <= 2.45 ()		OK	1.72	Walter Sigudla - 486333	M1
10025	A	Save the waveform result with the following name: TS# (#-Train number) _NBX_ WiFi2		OK		Walter Sigudla - 486333	M1
10026	A	Close Circuit Breaker 64Q1		OK		Walter Sigudla - 486333	M1
10027	R	Check that the Netbox turns ON		OK		Anthonia Mabowa - 494131	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 7 – Pantograph

 
7.1 Instructions list

7.1.1 021_PNT-Pantograph

 
I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Pantograph (SPP = 021)		OK		Tebogo Mtombeni - 529938	M1
10002	I	There should be no air in the main pipe		OK		Tebogo Mtombeni - 529938	M1
10003	R	Measure 0 Bar at point K2.8 using the pressure gauge		OK		Tebogo Mtombeni - 529938	M1
10004	A	Ensure that the pantograph isolation valve K2.5 is normalised (not isolated)		OK		Tebogo Mtombeni - 529938	M1
10005	I	Initial Conditions		OK		Tebogo Mtombeni - 529938	M1
10006	R	Read Defined Variable [TT] (MPU1) li_pnt_m1drainingcockr1 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10007	R	Read Defined Variable [TT] (MPU1) li_pnt_m1drainingcockr2 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10008	R	Read Defined Variable [TT] (MPU1) li_pnt_m1auxcpcontactorr1 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10009	R	Read Defined Variable [TT] (MPU1) li_pnt_m1auxcpcontactorr2 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10010	R	Read Defined Variable [TT] (MPU1) li_pnt_m1auxpressswitchr1 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10011	R	Read Defined Variable [TT] (MPU1) li_pnt_m1auxpressswitchr2 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10012	R	Read Defined Variable [TT] (MPU1) li_pnt_m1earthpantor1 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10013	R	Read Defined Variable [TT] (MPU1) li_pnt_m1earthpantor2 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10014	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantoisolatedr1 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10015	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantoisolatedr2 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10016	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr1 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1

10017	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr2 = 0.0	OK	0	Tebogo Mtombeni - 529938	M1
10018	I	Auxiliary Compressor	OK		Tebogo Mtombeni - 529938	M1
10019	A	Close Circuit Breaker 21Q1	OK		Tebogo Mtombeni - 529938	M1
10020	A	Close Circuit Breaker 21Q2	OK		Tebogo Mtombeni - 529938	M1
10021	A	Close Circuit Breaker 21Q3	OK		Tebogo Mtombeni - 529938	M1
10022	R	The Auxiliary compressor 21M1 turns ON	OK		Tebogo Mtombeni - 529938	M1
10023	R	Read Defined Variable [TT] (MPU1) lo_pnt_m1startauxiliarcompr1 = 1.0	OK	1	Tebogo Mtombeni - 529938	M1
10024	R	Read Defined Variable [TT] (MPU1) lo_pnt_m1startauxiliarcompr2 = 1.0	OK	1	Tebogo Mtombeni - 529938	M1
10025	R	Read Defined Variable [TT] (MPU1) li_pnt_m1auxcpcontactorr1 = 0.0	OK	0	Tebogo Mtombeni - 529938	M1
10026	R	Read Defined Variable [TT] (MPU1) li_pnt_m1auxcpcontactorr2 = 0.0	OK	0	Tebogo Mtombeni - 529938	M1
10027	A	Force [TT] (MPU1) lo_pnt_m1raisepantor1 = 1.0	OK		Tebogo Mtombeni - 529938	M1
10028	A	Allow the pressure to rise. Using the pressure gauge, check that the pressure at point K2.8 > 3.8Bar. (VERIFY BEFORE MOVING TO THE NEXT STEP)	OK		Tebogo Mtombeni - 529938	M1
10029	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr1 = 1.0	OK	1	Tebogo Mtombeni - 529938	M1
10030	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr2 = 1.0	OK	1	Tebogo Mtombeni - 529938	M1
10031	R	The pantograph is raised	OK		Tebogo Mtombeni - 529938	M1
10032	A	Allow the pressure to rise. Using the pressure gauge, check that the pressure at point K2.8 is between 6 - 7Bar. (VERIFY BEFORE MOVING TO THE NEXT STEP)	OK		Tebogo Mtombeni - 529938	M1
10033	R	The Auxiliary compressor 21M1 turns OFF	OK		Tebogo Mtombeni - 529938	M1
10034	R	Read Defined Variable [TT] (MPU1) li_pnt_m1auxcpcontactorr1 = 1.0	OK	1	Tebogo Mtombeni - 529938	M1
10035	R	Read Defined Variable [TT] (MPU1) li_pnt_m1auxcpcontactorr2 = 1.0	OK	1	Tebogo Mtombeni - 529938	M1

10036	A	Turn the pantograph isolation valve K2.5 to isolated position		OK		Tebogo Mtombeni - 529938	M1
10037	R	Read Defined Variable [TT] (MPU1) li_pnt_m1drainingcockr1 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10038	R	Read Defined Variable [TT] (MPU1) li_pnt_m1drainingcockr2 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10039	A	Force [TT] (MPU1) lo_pnt_m1startauxiliarcompr1 = 0.0		OK		Tebogo Mtombeni - 529938	M1
10040	A	Force [TT] (MPU1) lo_pnt_m1startauxiliarcompr2 = 0.0		OK		Tebogo Mtombeni - 529938	M1
10041	A	Drain the air by putting the isolation valve K2.5 in halfway position		OK		Tebogo Mtombeni - 529938	M1
10042	R	Using the pressure gauge, check that the Pantograph drops at 3.3 Bar.		OK		Tebogo Mtombeni - 529938	M1
10043	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr1 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10044	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr2 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10045	A	Turn the pantograph isolation valve K2.5 to normal position		OK		Tebogo Mtombeni - 529938	M1
10046	A	Release [TT] (MPU1) lo_pnt_m1startauxiliarcompr1		OK		Tebogo Mtombeni - 529938	M1
10047	A	Release [TT] (MPU1) lo_pnt_m1startauxiliarcompr2		OK		Tebogo Mtombeni - 529938	M1
10048	R	The Auxiliary compressor 21M1 turns ON		OK		Tebogo Mtombeni - 529938	M1
10049	A	Allow the pressure to rise. Using the pressure gauge, check that the pressure at point K2.8 is between 6 - 7Bar. (VERIFY BEFORE MOVING TO THE NEXT STEP)		OK		Tebogo Mtombeni - 529938	M1
10050	R	The Auxiliary compressor 21M1 turns OFF		OK		Tebogo Mtombeni - 529938	M1
10051	I	Isolation and Earthing		OK		Tebogo Mtombeni - 529938	M1
10052	A	In the HV Box, check that all the Green Keys are present.		OK		Tebogo Mtombeni - 529938	M1
10053	A	In the HV Box, set the HVB1 valve to Isolated position - to isolate the pantograph		OK		Tebogo Mtombeni - 529938	M1

10054	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantoisolatedr1 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10055	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantoisolatedr2 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10056	A	Turn the Earthing Switch to grounded position		OK		Tebogo Mtombeni - 529938	M1
10057	R	Read Defined Variable [TT] (MPU1) li_pnt_m1earthpantor1 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10058	R	Read Defined Variable [TT] (MPU1) li_pnt_m1earthpantor2 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10059	A	Turn the Earthing Switch to back to Normal position		OK		Tebogo Mtombeni - 529938	M1
10060	R	Read Defined Variable [TT] (MPU1) li_pnt_m1earthpantor1 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10061	R	Read Defined Variable [TT] (MPU1) li_pnt_m1earthpantor2 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10062	A	Set the HVB1 valve to Normal position		OK		Tebogo Mtombeni - 529938	M1
10063	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantoisolatedr1 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10064	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantoisolatedr2 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10065	A	Normalize the HV box and remove all spare/duplicate keys (green/yellow/blue)		OK		Tebogo Mtombeni - 529938	M1
10066	I	Pantograph Mechanical Test		OK		Tebogo Mtombeni - 529938	M1
10067	I	Housed Height Measurement, Pantograph Over-Height Measurement, Automatic Drop Device and Control Force Test		OK		Tebogo Mtombeni - 529938	M1
10068	I	Initial Conditions		OK		Tebogo Mtombeni - 529938	M1
10069	I	There should be no air in the main pipe		OK		Tebogo Mtombeni - 529938	M1
10070	R	Measure 0 Bar at point K2.8 using the pressure gauge		OK		Tebogo Mtombeni - 529938	M1
10071	A	Ensure that the pantograph isolation valve K2.5 is normalised (not isolated)		OK		Tebogo Mtombeni - 529938	M1
10072	I	Housed Height Measurement		OK		Tebogo Mtombeni - 529938	M1
10073	I	The purpose of this test is to ensure that the housed height of the pantograph		OK		Tebogo Mtombeni - 529938	M1

		complies with the specified dimensions The train must be positioned on a levelled track without any overhead catenary					
10074	A	Measure the perpendicular height (using a measuring tape and ruler extended from points A, B and C of the pantograph) of the pantograph on natural housed position (between the roof of the train and the pantograph collector head at points A, B, C)		OK		Tebogo Mtombeni - 529938	M1
10075	A	Ensure that no part of the pantograph is higher than 486mm above the roof		OK		Tebogo Mtombeni - 529938	M1
10076	R	A Result Max: $x \leq 486$ (mm)		OK	484	Tebogo Mtombeni - 529938	M1
10077	R	B Result Max: $x \leq 486$ (mm)		OK	485	Tebogo Mtombeni - 529938	M1
10078	R	C Result Max: $x \leq 486$ (mm)		OK	484	Tebogo Mtombeni - 529938	M1
10079	A	Check that the centre of the pantograph head corresponds with the track centreline in the housed position (Use marked ruler to compare)		OK		Tebogo Mtombeni - 529938	M1
10080	R	Pantograph aligned with the track centreline in housed position		OK		Tebogo Mtombeni - 529938	M1
10081	I	Automatic Drop Device		OK		Tebogo Mtombeni - 529938	M1
10082	I	The purpose of this test is to verify the correct operation of the automatic drop device (ADD) and will be performed by simulating the activation of the ADD pressure switch.		OK		Tebogo Mtombeni - 529938	M1
10083	A	Tie a cable on pantograph head collector		OK		Tebogo Mtombeni - 529938	M1
10084	A	Close Circuit Breaker 21Q3		OK		Tebogo Mtombeni - 529938	M1
10085	A	Close Circuit Breaker 21Q1		OK		Tebogo Mtombeni - 529938	M1
10086	A	Close Circuit Breaker 21Q2		OK		Tebogo Mtombeni - 529938	M1
10087	R	The Auxiliary compressor 21M1 turns ON		OK		Tebogo Mtombeni - 529938	M1
10088	A	Force [TT] (MPU1) $lo_pnt_m1raisepantor1 = 1.0$		OK		Tebogo Mtombeni - 529938	M1
10089	I	Allow the pressure to rise, and the pantograph to raise		OK		Tebogo Mtombeni - 529938	M1

10090	R	The pantograph is raised		OK		Tebogo Mtombeni - 529938	M1
10091	A	Activate the ADD manually on the roof by operating the bleeding screw (PT3) on the pan head to simulate a loss of air supply		OK		Tebogo Mtombeni - 529938	M1
10092	R	The pressure of the test point PT12 drops to 0 bar		OK		Tebogo Mtombeni - 529938	M1
10093	A	On the roof, close the bleeding screw (PT3) to reset the ADD		OK		Tebogo Mtombeni - 529938	M1
10094	R	Fault reset and equipment normalized		OK		Tebogo Mtombeni - 529938	M1
10095	A	Release [TT] (MPU1) lo_pnt_m1raisepantor1		OK		Tebogo Mtombeni - 529938	M1
10096	R	Pantograph is lowered		OK		Tebogo Mtombeni - 529938	M1
10097	I	Pantograph Over-Height Measurement		OK		Tebogo Mtombeni - 529938	M1
10098	I	The purpose of the next test is to verify that the pantograph over-height detection and auto dropping functions are calibrated and work correctly. This test simulates the condition when a pantograph is incorrectly raised in an area without any overhead line		OK		Tebogo Mtombeni - 529938	M1
10099	I	You will be required to time the rising and dropping of the pantograph using a stopwatch. measure the time from the moment the pantograph starts to rise until the pantograph reaches maximum raised position; then time from the moment the pantograph starts dropping at overheight detection till it reaches housed position		OK		Tebogo Mtombeni - 529938	M1
10100	A	Use the rope to hook the pantograph and place the marked ruler perpendicular to the roof of the car. See the picture attached.		OK		Tebogo Mtombeni - 529938	M1
10101	A	Force [TT] (MPU1) lo_pnt_m1raisepantor1 = 1.0		OK		Tebogo Mtombeni - 529938	M1
10102	A	Whilst holding the end of the rope, allow the pressure to rise, and the pantograph to rise until it reaches the maximum height marked on the ruler.		OK		Tebogo Mtombeni - 529938	M1
10103	R	Rising time Result Max: x <= 10 (S)		OK	3.63	Tebogo Mtombeni - 529938	M1
10104	A	By adjusting the rope, ensure that the Pantograph Panhead is aligned with the		OK		Tebogo Mtombeni - 529938	M1

		marking on the ruler.					
10105	A	Adjust the Over-height valve such that when the panto goes above the marking on the ruler, the overheight must be detected.		OK		Tebogo Mtombeni - 529938	M1
10106	R	The over-height valve is adjusted correctly.		OK		Tebogo Mtombeni - 529938	M1
10107	A	Release [TT] (MPU1) lo_pnt_m1raisepantor1		OK		Tebogo Mtombeni - 529938	M1
10108	R	Pantograph is lowered		OK		Tebogo Mtombeni - 529938	M1
10109	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr1 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10110	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr2 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10111	A	Force [TT] (MPU1) lo_pnt_m1raisepantor1 = 1.0		OK		Tebogo Mtombeni - 529938	M1
10112	A	Allow the pantograph to rise freely until it reaches overheight.		OK		Tebogo Mtombeni - 529938	M1
10113	R	Overheight is detected immediately after passing the marked area on the ruler and pantograph begins to drop		OK		Tebogo Mtombeni - 529938	M1
10114	R	Lowering time Result Max: x <= 7 (S)		OK	6.7	Tebogo Mtombeni - 529938	M1
10115	A	Release [TT] (MPU1) lo_pnt_m1raisepantor1		OK		Tebogo Mtombeni - 529938	M1
10116	A	Reset over-height valve (PT2) on the roof		OK		Tebogo Mtombeni - 529938	M1
10117	R	Equipment normalized. (Only after resetting the PT2 valve, can the pantograph be raised)		OK		Tebogo Mtombeni - 529938	M1
10118	I	Control Force Test		OK		Tebogo Mtombeni - 529938	M1
10119	I	The purpose of this test is to ensure that the pantograph maintains an acceptable force against the catenary wire overall operating heights		OK		Tebogo Mtombeni - 529938	M1
10120	A	Attach the dynamometer to the pantograph's head collector		OK		Tebogo Mtombeni - 529938	M1
10121	A	Raise the pantograph and measure the static force when the pantograph begins to rise after pulling the dynamometer up		OK		Tebogo Mtombeni - 529938	M1

		(lifting force on housed position)					
10122	A	Force [TT] (MPU1) lo_pnt_m1raisepantor1 = 1.0		OK		Tebogo Mtombeni - 529938	M1
10123	I	Allow the pressure to rise, and the pantograph to raise		OK		Tebogo Mtombeni - 529938	M1
10124	R	The pantograph is raised		OK		Tebogo Mtombeni - 529938	M1
10125	R	F>150N		OK		Tebogo Mtombeni - 529938	M1
10126	A	Attach the 8.5kg (one 7.5kg and one 1kg) dead weight to the pantohead to apply an 85N force whilst the panto is in the raised position.		OK		Tebogo Mtombeni - 529938	M1
10127	R	The pantographs should remain in the neutral position		OK		Tebogo Mtombeni - 529938	M1
10128	A	Check that the centre of the pantograph head corresponds with the track centreline on maximum raised position		OK		Tebogo Mtombeni - 529938	M1
10129	R	Pantograph aligned with the track centreline in maximum raised position (Use marked ruler to compare)		OK		Tebogo Mtombeni - 529938	M1
10130	A	Remove 1kg dead weight		OK		Tebogo Mtombeni - 529938	M1
10131	R	Pantograph continues to rise to over height condition		OK		Tebogo Mtombeni - 529938	M1
10132	A	Remove the dynamometer and dead weights from the pantograph's head- collector		OK		Tebogo Mtombeni - 529938	M1
10133	A	Release [TT] (MPU1) lo_pnt_m1raisepantor1		OK		Tebogo Mtombeni - 529938	M1
10134	R	Pantograph is lowered		OK		Tebogo Mtombeni - 529938	M1
10135	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr1 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10136	R	Read Defined Variable [TT] (MPU1) li_pnt_m1pantorisedr2 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 8 – Rescue Mode and Emergency Disconnection

8.1 Instructions list

8.1.1 027_ERM-Rescue Mode and Emergency Disconnection

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Rescue Mode and Emergency Disconnection (SPP=027)		OK		Anthonia Mabowa - 494131	M1
10002	I	Initial Conditions		OK		Anthonia Mabowa - 494131	M1
10003	I	110Vdc Normal power supply is connected to the vehicle, and switched ON		OK		Anthonia Mabowa - 494131	M1
10004	I	Backup Mode Train Lines Dev1/29 = END1 90XR15 pin23 Dev5/33 = END2 90XP25 pin 23		OK		Anthonia Mabowa - 494131	M1
10005	A	Force [NI] Dev1/29 = 1.0		OK		Anthonia Mabowa - 494131	M1
10006	R	Read Defined Variable [NI] Dev5/33 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10007	R	Relay 27K1 is Energised		OK		Anthonia Mabowa - 494131	M1
10008	R	Relay 27K2 is De-energised		OK		Anthonia Mabowa - 494131	M1
10009	A	Timer 30.0 S		OK		Anthonia Mabowa - 494131	M1
10010	R	Relay 27K2 is De-energised		OK		Anthonia Mabowa - 494131	M1
10011	A	Timer 30.0 S		OK		Anthonia Mabowa - 494131	M1
10012	R	Relay 27K2 is energised		OK		Anthonia Mabowa - 494131	M1
10013	I	Backup Mode Train Lines Dev1/29 = END1 90XR25 pin23 Dev5/33 = END2 90XP35 pin 23		OK		Anthonia Mabowa - 494131	M1
10014	A	Force [NI] Dev1/29 = 0.0		OK		Anthonia Mabowa - 494131	M1
10015	R	Read Defined Variable [NI] Dev5/33 = 0.0		OK	0	Anthonia Mabowa - 494131	M1

10016	R	Relay 27K1 is De-energised		OK		Anthonia Mabowa - 494131	M1
10017	R	Relay 27K2 is De-energised		OK		Anthonia Mabowa - 494131	M1
10018	I	Emergency Disconnection		OK		Anthonia Mabowa - 494131	M1
10019	I	Emergency Disconnection Train Lines Dev1/30 = END1 90XR25 pin24 Dev5/34 = END2 90XP35 pin 24		OK		Anthonia Mabowa - 494131	M1
10020	A	Force [NI] Dev1/30 = 1.0		OK		Anthonia Mabowa - 494131	M1
10021	R	Read Defined Variable [NI] Dev5/34 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10022	R	Relay 27K5 is Energised		OK		Anthonia Mabowa - 494131	M1
10023	I	Emergency Disconnection Train Lines Dev1/30 = END1 90XR25 pin24 Dev5/34 = END2 90XP35 pin 24		OK		Anthonia Mabowa - 494131	M1
10024	A	Force [NI] Dev1/30 = 0.0		OK		Anthonia Mabowa - 494131	M1
10025	R	Read Defined Variable [NI] Dev5/34 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10026	R	Relay 27K5 is De-energised		OK		Anthonia Mabowa - 494131	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 9 – Emergency Brake

9.1 Instructions list

9.1.1 044_UBK-Emergency Brake

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Emergency Brake (SPP=044)		OK		Anthonia Mabowa - 494131	M1
10002	I	Initial Conditions		OK		Anthonia Mabowa - 494131	M1
10003	I	No PEAs are activated		OK		Anthonia Mabowa - 494131	M1
10004	I	110Vdc Normal power supply should be connected to the vehicle and ON		OK		Anthonia Mabowa - 494131	M1
10005	I	Visual Inspection		OK		Anthonia Mabowa - 494131	M1
10006	A	Physically and visually inspect all the Disk Break Units (DBU) and brake pads, to ensure they are securely fitted		OK		Anthonia Mabowa - 494131	M1
10007	R	All the brake DBUs are correctly installed, and all the brake pads are correctly installed and locked		OK		Anthonia Mabowa - 494131	M1
10008	A	Check the piping installation		OK		Anthonia Mabowa - 494131	M1
10009	R	All the pipes are installed on the vehicle		OK		Anthonia Mabowa - 494131	M1
10010	A	Check all the Passenger Emergency Alarm handles, and ensure they are connected to their respective connectors		OK		Anthonia Mabowa - 494131	M1
10011	R	All the PEAs are installed and connected		OK		Anthonia Mabowa - 494131	M1
10012	I	Train Lines		OK		Anthonia Mabowa - 494131	M1
10013	I	Emergency Brake Loop Train Lines Dev1/5 = END1 90XR24 pin 8 Dev5/5 = END2 90XP34 pin 8		OK		Anthonia Mabowa - 494131	M1
10014	A	Force [NI] Dev1/5 = 1.0		OK		Anthonia Mabowa - 494131	M1
10015	R	Read Defined Variable [NI] Dev5/5 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10016	A	Force [NI] Dev1/5 = 0.0		OK		Anthonia Mabowa - 494131	M1
10017	R	Read Defined Variable [NI] Dev5/5 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10018	I	Emergency Brake Loop Override Train Lines Dev1/6 = END1 90XR24 pin 9		OK		Anthonia Mabowa - 494131	M1

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

		Dev5/6 = END2 90XP34 pin 9					
10019	A	Force [NI] Dev1/6 = 1.0		OK		Anthonia Mabowa - 494131	M1
10020	R	Read Defined Variable [NI] Dev5/6 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10021	A	Force [NI] Dev1/6 = 0.0		OK		Anthonia Mabowa - 494131	M1
10022	R	Read Defined Variable [NI] Dev5/6 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10023	I	Emergency Brake Train Line Train Lines Dev1/50 = END1 90XR25 pin 67 Dev5/61 = END2 90XP35 pin 67		OK		Anthonia Mabowa - 494131	M1
10024	A	Force [NI] Dev1/50 = 1.0		OK		Anthonia Mabowa - 494131	M1
10025	R	Read Defined Variable [NI] Dev5/61 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10026	A	Force [NI] Dev1/50 = 0.0		OK		Anthonia Mabowa - 494131	M1
10027	R	Read Defined Variable [NI] Dev5/61 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10028	I	PEA Loop OTDR Train Lines Dev1/7 = END1 90XR24 pin 10 Dev5/7 = END2 90XP34 pin 10		OK		Anthonia Mabowa - 494131	M1
10029	A	Force [NI] Dev1/7 = 1.0		OK		Anthonia Mabowa - 494131	M1
10030	R	Read Defined Variable [NI] Dev5/7 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10031	A	Force [NI] Dev1/7 = 0.0		OK		Anthonia Mabowa - 494131	M1
10032	R	Read Defined Variable [NI] Dev5/7 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10033	I	PEA Reset		OK		Anthonia Mabowa - 494131	M1
10034	A	Check continuity on Timer Relay 44D1 between points A1 and B1		OK		Anthonia Mabowa - 494131	M1
10035	R	The points are continuous		OK		Anthonia Mabowa - 494131	M1
10036	A	Check continuity on Timer Relay 44D1 between points A4, B3 and C4		OK		Anthonia Mabowa - 494131	M1
10037	R	All three points are continuous		OK		Anthonia Mabowa - 494131	M1
10038	A	Close Circuit Breaker 44Q1		OK		Anthonia Mabowa - 494131	M1
10039	I	PEA Loop Train Lines Dev1/58 = END1 90XR25 pin 95 Dev5/62 = END2 90XP35 pin 95		OK		Anthonia Mabowa - 494131	M1
10040	A	Force [NI] Dev1/58 = 1.0		OK		Anthonia Mabowa - 494131	M1

10041	R	Read Defined Variable [NI] Dev5/62 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10042	A	Force [NI] Dev1/58 = 0.0		OK		Anthonia Mabowa - 494131	M1
10043	R	Read Defined Variable [NI] Dev5/62 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10044	A	Force [NI] Dev1/58 = 1.0		OK		Anthonia Mabowa - 494131	M1
10045	A	Activate the PEA on door 5 (44S15)		OK		Anthonia Mabowa - 494131	M1
10046	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10047	R	Read Defined Variable [NI] Dev5/62 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10048	A	Reset the PEA using square key		OK		Anthonia Mabowa - 494131	M1
10049	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10050	R	Read Defined Variable [NI] Dev5/62 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10051	A	Activate the PEA on door 3 (44S13)		OK		Anthonia Mabowa - 494131	M1
10052	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10053	R	Read Defined Variable [NI] Dev5/62 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10054	A	Reset the PEA using square key		OK		Anthonia Mabowa - 494131	M1
10055	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10056	R	Read Defined Variable [NI] Dev5/62 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10057	A	Activate the PEA on door 1 (44S11)		OK		Anthonia Mabowa - 494131	M1
10058	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10059	R	Read Defined Variable [NI] Dev5/62 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10060	A	Reset the PEA using square key		OK		Anthonia Mabowa - 494131	M1
10061	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1

10062	R	Read Defined Variable [NI] Dev5/62 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10063	A	Activate the PEA on door 2 (44S12)		OK		Anthonia Mabowa - 494131	M1
10064	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10065	R	Read Defined Variable [NI] Dev5/62 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10066	A	Reset the PEA using square key		OK		Anthonia Mabowa - 494131	M1
10067	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10068	R	Read Defined Variable [NI] Dev5/62 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10069	A	Activate the PEA on door 4 (44S14)		OK		Anthonia Mabowa - 494131	M1
10070	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10071	R	Read Defined Variable [NI] Dev5/62 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10072	A	Reset the PEA using square key		OK		Anthonia Mabowa - 494131	M1
10073	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10074	R	Read Defined Variable [NI] Dev5/62 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10075	A	Activate the PEA on door 6 (44S16)		OK		Anthonia Mabowa - 494131	M1
10076	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10077	R	Read Defined Variable [NI] Dev5/62 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10078	A	Reset the PEA using square key		OK		Anthonia Mabowa - 494131	M1
10079	I	PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95		OK		Anthonia Mabowa - 494131	M1
10080	R	Read Defined Variable [NI] Dev5/62 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10081	I	PEA Loop Train Lines Dev1/58 = END1 90XR15 pin 95		OK		Anthonia Mabowa - 494131	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

10082	A	Force [N] Dev1/58 = 0.0		OK		Anthonia Mabowa - 494131	M1
-------	---	-------------------------	--	----	--	-----------------------------	----



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 10 – Service Brake

10.1 Instructions list

10.1.1 040_SBK-Service Brake

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Service Brake (SPP=040)		OK		Tebogo Mtombeni - 529938	M1
10002	I	Initial Conditions		OK		Tebogo Mtombeni - 529938	M1
10003	I	No air supply to the vehicle		OK		Tebogo Mtombeni - 529938	M1
10004	I	All BPM cocks are in normal position (not isolated)		OK		Tebogo Mtombeni - 529938	M1
10005	I	110Vdc Normal power supply should be connected to the vehicle and ON		OK		Tebogo Mtombeni - 529938	M1
10006	I	Follow the procedure in the document below to upload software onto the TBCU electronic		OK		Tebogo Mtombeni - 529938	M1
10007	I	Power Supply		OK		Tebogo Mtombeni - 529938	M1
10008	A	Remove the connector 10XR12_XCB2 from the propulsion box		OK		Tebogo Mtombeni - 529938	M1
10009	A	Close Circuit Breaker 33Q1, 33Q3 and 33Q5		OK		Tebogo Mtombeni - 529938	M1
10010	A	Check the voltage on connector 10XR12_XCB2 between pins 4 (+) and 69 (-); 4(+) and 67(-); and 5(+) and 68(-)		OK		Tebogo Mtombeni - 529938	M1
10011	R	Battery voltage (above 80Vdc) is measured on connector 10XR12_XCB2 between pins 4 (+) and 69 (-); 4(+) and 67(-); and 5(+) and 68(-)		OK		Tebogo Mtombeni - 529938	M1
10012	A	Open Circuit Breaker 33Q1 and 33Q3, Replace connector 10XR12_XCB2 on the propulsion box, and Close Circuit breaker 33Q1 and 33Q3		OK		Tebogo Mtombeni - 529938	M1
10013	A	Remove the connector -40XP2_C2_16 from pneumatic BPM		OK		Tebogo Mtombeni - 529938	M1
10014	A	Close Circuit Breaker 40Q1		OK		Tebogo Mtombeni - 529938	M1
10015	A	Check the voltage on connector 40XP2_C2_16 between pins 13 (+) and 31 (-)		OK		Tebogo Mtombeni - 529938	M1

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

10016	R	Battery voltage (above 80Vdc) is measured on connector 40XP2_C2_16 between pins 13 (+) and 31 (-)		OK		Tebogo Mtombeni - 529938	M1
10017	A	Open Circuit Breaker 40Q1, Replace connector -40XP2_C2_16 on the pneumatic BPM, and Close Circuit breaker -40Q1		OK		Tebogo Mtombeni - 529938	M1
10018	R	The pneumatic BPM 40A2 is ON		OK		Tebogo Mtombeni - 529938	M1
10019	I	Brake Air Supply and Brake Application		OK		Tebogo Mtombeni - 529938	M1
10020	I	EB Reduced Train Lines Dev2/85 = END1 90XR25 pin 60 Dev5/51 = END2 90XP35 pin 60		OK		Tebogo Mtombeni - 529938	M1
10021	R	Read Defined Variable [NI] Dev2/85 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10022	R	Read Defined Variable [NI] Dev5/51 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10023	I	Brake Applied Train Lines Dev2/83 = END1 90XR25 pin 50 Dev5/49 = END2 90XP35 pin 50		OK		Tebogo Mtombeni - 529938	M1
10024	R	Read Defined Variable [NI] Dev2/83 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10025	R	Read Defined Variable [NI] Dev5/49 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10026	R	Read Defined Variable [TT] (MPU1) li_sbk_m1brakeairsuppokr1 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10027	R	Read Defined Variable [TT] (MPU1) li_sbk_m1brakeairsuppokr2 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10028	R	Read Defined Variable [TT] (TBCU1) LI_BRPS_NOK = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10029	R	Read Defined Variable [TT] (TBCU1) LI_BRAKE_NOT_APPLIED = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10030	A	Close/Isolate the Isolation cock F2.1/3		OK		Tebogo Mtombeni - 529938	M1
10031	A	Open the Isolation cock F2.2/3		OK		Tebogo Mtombeni - 529938	M1
10032	A	Connect the air supply to the vehicle main pipe coupling flexible hose F3/5, and switch the supply ON		OK		Tebogo Mtombeni - 529938	M1
10033	I	Take note of any air leaks in the pipes or valves		OK		Tebogo Mtombeni - 529938	M1
10034	A	Allow the pressure to go above 6 bar. The pressure can be checked at the BRTP test		OK		Tebogo Mtombeni - 529938	M1

		point					
10035	R	B RTP pressure is measured ≥ 6 Bar		OK		Tebogo Mtombeni - 529938	M1
10036	I	Brake Applied Train Lines Dev2/83 = END1 90XR25 pin 50 Dev5/49 = END2 90XP35 pin 50		OK		Tebogo Mtombeni - 529938	M1
10037	R	Read Defined Variable [NI] Dev2/83 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10038	R	Read Defined Variable [NI] Dev5/49 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10039	R	Read Defined Variable [TT] (MPU1) li_sbk_m1brakeairsupokr1 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10040	R	Read Defined Variable [TT] (MPU1) li_sbk_m1brakeairsupokr2 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10041	R	Read Defined Variable [TT] (TBCU1) LI_BRPS_NOK = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10042	R	Read Defined Variable [TT] (TBCU1) LI_BRAKE_NOT_APPLIED = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10043	I	Remote Isolation		OK		Tebogo Mtombeni - 529938	M1
10044	I	Remote Isolation Train Lines Dev1/84 = END1 90XR25 pin 59 Dev5/50 = END2 90XP35 pin 59		OK		Tebogo Mtombeni - 529938	M1
10045	A	Force [NI] Dev1/84 = 1.0		OK		Tebogo Mtombeni - 529938	M1
10046	R	Read Defined Variable [NI] Dev5/50 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10047	R	Read Defined Variable [TT] (TBCU1) LI_BRAKE_ISO = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10048	A	Force [TT] (MPU1) lo_sbk_m1isobrake = 1.0		OK		Tebogo Mtombeni - 529938	M1
10049	R	Read Defined Variable [TT] (TBCU1) LI_BRAKE_ISO = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10050	I	Remote Isolation Train Lines Dev5/50 = END2 90XP35 pin 59		OK		Tebogo Mtombeni - 529938	M1
10051	R	Read Defined Variable [NI] Dev5/50 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10052	A	Release [TT] (MPU1) lo_sbk_m1isobrake		OK		Tebogo Mtombeni - 529938	M1
10053	R	Read Defined Variable [NI] Dev5/50 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10054	R	Read Defined Variable [TT] (TBCU1) LI_BRAKE_ISO = 1.0		OK	1	Tebogo Mtombeni - 529938	M1

10055	I	Remote Isolation Train Lines Dev1/84 = END1 90XR25 pin 59		OK		Tebogo Mtombeni - 529938	M1
10056	A	Force [NI] Dev1/84 = 0.0		OK		Tebogo Mtombeni - 529938	M1
10057	I	Manual Isolation		OK		Tebogo Mtombeni - 529938	M1
10058	I	EB Reduced Train Lines Dev2/85 = END1 90XR25 pin 60 Dev5/51 = END2 90XP35 pin 60		OK		Tebogo Mtombeni - 529938	M1
10059	R	Read Defined Variable [NI] Dev2/85 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10060	R	Read Defined Variable [NI] Dev5/51 = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10061	R	Read Defined Variable [TT] (MPU1) li_sbk_m1servicebrakedc = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10062	R	Read Defined Variable [TT] (TBCU1) Li_ServiceBrakeDC = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10063	A	Close the Isolation cock C2.3.1		OK		Tebogo Mtombeni - 529938	M1
10064	I	EB Reduced Train Lines Dev2/85 = END1 90XR25 pin 60 Dev5/51 = END2 90XP35 pin 60		OK		Tebogo Mtombeni - 529938	M1
10065	R	Read Defined Variable [NI] Dev2/85 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10066	R	Read Defined Variable [NI] Dev5/51 = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10067	R	Read Defined Variable [TT] (MPU1) li_sbk_m1servicebrakedc = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10068	R	Read Defined Variable [TT] (TBCU1) Li_ServiceBrakeDC = 1.0		OK	1	Tebogo Mtombeni - 529938	M1
10069	A	Re-open the Isolation cock C2.3.1		OK		Tebogo Mtombeni - 529938	M1
10070	R	Read Defined Variable [TT] (MPU1) li_sbk_m1servicebrakedc = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10071	I	Switch OFF 400V before reading the bcufault variable		OK		Tebogo Mtombeni - 529938	M1
10072	R	Read Defined Variable [TT] (MPU1) li_sbk_m1bcufault = 0.0		OK	0	Tebogo Mtombeni - 529938	M1
10073	A	Force [TT] (TBCU1) LO_BRK_FLT = 1.0		OK		Tebogo Mtombeni - 529938	M1
10074	R	Read Defined Variable [TT] (MPU1) li_sbk_m1bcufault = 1.0		OK	1	Tebogo Mtombeni - 529938	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

10075	A	Release [TT] (TBCU1) LO_BRK_FLT		OK		Tebogo Mtombeni - 529938	M1
-------	---	---------------------------------	--	----	--	-----------------------------	----



Serial Tests Report TS235 – M1 – VFT RTR Vehicle Functional Static Testing Report	Document Reference GIB0000006951 Version: A0	Emission date 23/07/2024
---	--	-----------------------------



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 11 – Holding and Parking Brake

11.1 Instructions list

11.1.1 045_PBK-Holding and Parking Brake

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Holding and Parking Brake (SPP_045)		OK		Sicelo Mtolo - 525130	M1
10002	I	Initial Conditions		OK		Sicelo Mtolo - 525130	M1
10003	I	Using the tools list on the side of your screen, record the serial number of the manometer that will be used in this test		OK		Sicelo Mtolo - 525130	M1
10004	I	Check that the pressure on Test point C2.11/1 is >5bar		OK		Sicelo Mtolo - 525130	M1
10005	I	Visual Inspection		OK		Sicelo Mtolo - 525130	M1
10006	A	Check the installation of the manual parking brake release components (lever + cable)		OK		Sicelo Mtolo - 525130	M1
10007	R	The lever is securely fixed (tight), and the cable is correctly attached to the bogie (there is no excess cable, and all clamps are installed)		OK		Sicelo Mtolo - 525130	M1
10008	I	Circuit Breakers		OK		Sicelo Mtolo - 525130	M1
10009	I	Circuit Breaker 33Q3 and 33Q5 should be closed		OK		Sicelo Mtolo - 525130	M1
10010	I	Parking Brake Pressure Switch		OK		Sicelo Mtolo - 525130	M1
10011	R	Read Defined Variable [TT] (TBCU1) LI_PARK_BR_RELEASE = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10012	R	Read Defined Variable [TT] (TBCU1) LI_BRAKE_STAT = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10013	R	Read Defined Variable [TT] (MPU1) TBCU1_parkbrakerelease = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10014	R	Read Defined Variable [TT] (MPU1) tbcu1_li_pbrake_stat = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10015	I	Parking Brake Applied Train Lines Dev2/52 = END1 90XR25 pin 77 Dev5/58 = END2 90XP35 pin 77		OK		Sicelo Mtolo - 525130	M1
10016	R	Read Defined Variable [NI] Dev2/52 = 0.0		OK	0	Sicelo Mtolo - 525130	M1

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

10017	R	Read Defined Variable [NI] Dev5/58 = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10018	I	Parking Brake Applied		OK		Sicelo Mtolo - 525130	M1
10019	I	For this section of the test, ensure that the pressure on test point C2.11/1 is ALWAYS BELOW 4.8 Bar. if it goes above, turn the Isolation cock C2.3.2 to CLOSE position to drain the air		OK		Sicelo Mtolo - 525130	M1
10020	A	Position the Isolation cock C2.3.2 in CLOSE position. Allow the parking brake air pressure to drain to below 4.5 Bar. Use the test point C2.11/1 to verify the air pressure <4.5 Bar		OK		Sicelo Mtolo - 525130	M1
10021	R	Pressure at test point C2.11/1 <4.5 Bar		OK		Sicelo Mtolo - 525130	M1
10022	R	Read Defined Variable [TT] (TBCU1) LI_PARK_BR_RELEASE = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10023	R	Read Defined Variable [TT] (MPU1) TBCU1_parkbrakerelease = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10024	A	Return the Isolation cock C2.3.2 to OPEN position		OK		Sicelo Mtolo - 525130	M1
10025	R	Read Defined Variable [TT] (TBCU1) LI_BRAKE_STAT = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10026	R	Read Defined Variable [TT] (MPU1) tbcu1_li_pbrake_stat = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10027	R	Read Defined Variable [TT] (TBCU1) LI_PARK_BR_DC = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10028	R	Read Defined Variable [TT] (MPU1) TBCU1_parkbrakeisoldc = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10029	R	Read Defined Variable [TT] (MPU1) li_pbk_m1parkbrakeisol = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10030	I	Parking Brake Applied Train Lines Dev2/52 = END1 90XR25 pin 77 Dev5/58 = END2 90XP35 pin 77		OK		Sicelo Mtolo - 525130	M1
10031	R	Read Defined Variable [NI] Dev2/52 = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10032	R	Read Defined Variable [NI] Dev5/58 = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10033	A	Position the Isolation cock C2.3.2 in CLOSE position		OK		Sicelo Mtolo - 525130	M1
10034	R	Read Defined Variable [TT] (MPU1) li_pbk_m1parkbrakeisol = 1.0		OK	1	Sicelo Mtolo - 525130	M1

10035	R	Read Defined Variable [TT] (TBCU1) LI_BRAKE_STAT = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10036	R	Read Defined Variable [TT] (MPU1) tbcu1_li_brake_stat = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10037	R	Read Defined Variable [TT] (TBCU1) LI_PARK_BR_DC = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10038	R	Read Defined Variable [TT] (MPU1) TBCU1_parkbrakeisoldc = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10039	I	Parking Brake Applied Train Lines Dev2/52 = END1 90XR25 pin 77 Dev5/58 = END2 90XP35 pin 77		OK		Sicelo Mtolo - 525130	M1
10040	R	Read Defined Variable [NI] Dev2/52 = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10041	R	Read Defined Variable [NI] Dev5/58 = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10042	A	Return the Isolation cock C2.3.2 to OPEN position		OK		Sicelo Mtolo - 525130	M1
10043	I	Remote Parking Brake Command		OK		Sicelo Mtolo - 525130	M1
10044	I	Remote Parking Brake Command Train Lines Dev1/51 = END1 90XR25 pin 68 Dev5/57 = END2 90XP35 pin 68		OK		Sicelo Mtolo - 525130	M1
10045	A	Force [NI] Dev1/51 = 1.0		OK		Sicelo Mtolo - 525130	M1
10046	R	Read Defined Variable [NI] Dev5/57 = 1.0		OK	1	Sicelo Mtolo - 525130	M1
10047	R	Confirm that the parking brake is applied, and air is released from electro valve C2.5		OK		Sicelo Mtolo - 525130	M1
10048	I	Remote Parking Brake Command Train Lines Dev1/51 = END1 90XR25 pin 68 Dev5/57 = END2 90XP35 pin 68		OK		Sicelo Mtolo - 525130	M1
10049	A	Force [NI] Dev1/51 = 0.0		OK		Sicelo Mtolo - 525130	M1
10050	R	Read Defined Variable [NI] Dev5/57 = 0.0		OK	0	Sicelo Mtolo - 525130	M1
10051	R	Confirm that electro valve C2.5 has stopped emitting air		OK		Sicelo Mtolo - 525130	M1



Serial Tests Report TS235 – M1 – VFT RTR Vehicle Functional Static Testing Report	Document Reference GIB0000006951 Version: A0	Emission date 23/07/2024
---	--	-----------------------------

Section 12 – Passenger Doors

12.1 Instructions list

12.1.1 050_DOR-Passenger Doors

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Passenger Doors (SPP=050)		OK		Siphesihle Mchunu - 491465	M1
10002	I	Initial conditions		OK		Siphesihle Mchunu - 491465	M1
10003	I	110Vdc Normal power supply is connected to the vehicle and ON		OK		Siphesihle Mchunu - 491465	M1
10004	I	Ensure that the TCMS network is functional		OK		Siphesihle Mchunu - 491465	M1
10005	I	Circuit Breakers		OK		Siphesihle Mchunu - 491465	M1
10006	A	Close Circuit Breaker 50Q1		OK		Siphesihle Mchunu - 491465	M1
10007	R	DCU 1 is powered ON		OK		Siphesihle Mchunu - 491465	M1
10008	R	Check on the DDU that DCU1 is online		OK		Siphesihle Mchunu - 491465	M1
10009	A	Close Circuit Breaker 50Q2		OK		Siphesihle Mchunu - 491465	M1
10010	R	DCU 2 is powered ON		OK		Siphesihle Mchunu - 491465	M1
10011	R	Check on the DDU that DCU2 is online		OK		Siphesihle Mchunu - 491465	M1
10012	A	Close Circuit Breaker 50Q3		OK		Siphesihle Mchunu - 491465	M1
10013	R	DCU 3 is powered ON		OK		Siphesihle Mchunu - 491465	M1
10014	R	Check on the DDU that DCU3 is online		OK		Siphesihle Mchunu - 491465	M1
10015	A	Close Circuit Breaker 50Q4		OK		Siphesihle Mchunu - 491465	M1
10016	R	DCU 4 is powered ON		OK		Siphesihle Mchunu - 491465	M1
10017	R	Check on the DDU that DCU4 is online		OK		Siphesihle Mchunu - 491465	M1
10018	A	Close Circuit Breaker 50Q5		OK		Siphesihle Mchunu - 491465	M1
10019	R	DCU 5 is powered ON		OK		Siphesihle Mchunu - 491465	M1
10020	R	Check on the DDU that DCU5 is online		OK		Siphesihle Mchunu - 491465	M1
10021	A	Close Circuit Breaker 50Q6		OK		Siphesihle Mchunu - 491465	M1

10022	R	DCU 6 is powered ON		OK		Siphesihle Mchunu - 491465	M1
10023	R	Check on the DDU that DCU6 is online		OK		Siphesihle Mchunu - 491465	M1
10024	A	Close Circuit Breaker 50Q7		OK		Siphesihle Mchunu - 491465	M1
10025	I	Car ID Code		OK		Siphesihle Mchunu - 491465	M1
10026	A	Using the DDU on the test bench, check that all the doors on M1 are available - as in the picture attached.		OK		Siphesihle Mchunu - 491465	M1
10027	R	All doors are available		OK		Siphesihle Mchunu - 491465	M1
10028	I	Door Open and Close - Safety Loop		OK		Siphesihle Mchunu - 491465	M1
10029	I	ERTMS Auth Left Train Lines Dev1/81 = END1 90XR25 pin 44 Dev5/86 = END2 90XP35 pin 44		OK		Siphesihle Mchunu - 491465	M1
10030	A	Force [NI] Dev1/81 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10031	R	Read Defined Variable [NI] Dev5/86 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10032	A	Force [NI] Dev1/81 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10033	R	Read Defined Variable [NI] Dev5/86 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10034	I	ERTMS Auth RightTrain Lines Dev1/82 = END1 90XR25 pin 47 Dev5/87 = END2 90XP35 pin 47		OK		Siphesihle Mchunu - 491465	M1
10035	A	Force [NI] Dev1/82 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10036	R	Read Defined Variable [NI] Dev5/87 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10037	A	Force [NI] Dev1/82 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10038	R	Read Defined Variable [NI] Dev5/87 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10039	I	Doors Open Train Lines Dev1/49 = END1 90XR25 pin 66 Dev5/55 = END2 90XP35 pin 66		OK		Siphesihle Mchunu - 491465	M1
10040	A	Force [NI] Dev1/49 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10041	R	Read Defined Variable [NI] Dev5/55 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10042	A	Force [NI] Dev1/49 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10043	R	Read Defined Variable [NI] Dev5/55 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10044	I	Door Close Right Train Lines Dev1/53 = END1 90XR25 pin 78		OK		Siphesihle Mchunu - 491465	M1

		Dev5/59 = END2 90XP35 pin 78					
10045	A	Force [NI] Dev1/53 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10046	R	Read Defined Variable [NI] Dev5/59 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10047	A	Force [NI] Dev1/53 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10048	R	Read Defined Variable [NI] Dev5/59 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10049	I	Door Close Left Train Lines Dev1/54 = END1 90XR25 pin 79 Dev5/60 = END2 90XP35 pin 79		OK		Siphesihle Mchunu - 491465	M1
10050	A	Force [NI] Dev1/54 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10051	R	Read Defined Variable [NI] Dev5/60 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10052	A	Force [NI] Dev1/54 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10053	R	Read Defined Variable [NI] Dev5/60 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10054	I	Door Auth Left Train Lines Dev1/56 = END1 90XR25 pin 85 Dev5/64 = END2 90XP35 pin 85		OK		Siphesihle Mchunu - 491465	M1
10055	A	Force [NI] Dev1/56 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10056	R	Read Defined Variable [NI] Dev5/64 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10057	I	Door Auth Right Train Lines Dev1/55 = END1 90XR25 pin 84 Dev5/61 = END2 90XP35 pin 84		OK		Siphesihle Mchunu - 491465	M1
10058	A	Force [NI] Dev1/64 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10059	R	Read Defined Variable [NI] Dev5/56 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10060	I	V<3km/h Train Lines Dev1/35 = END1 90XR25 pin 29 Dev5/39 = END2 90XP35 pin 29		OK		Siphesihle Mchunu - 491465	M1
10061	A	Force [NI] Dev1/35 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10062	R	Read Defined Variable [NI] Dev5/39 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10063	A	Force [TT] (MPU1) lo_dor_m1opendoorleft = 1.0		OK		Siphesihle Mchunu - 491465	M1
10064	A	Force [TT] (MPU1) lo_dor_m1opendoorright = 1.0		OK		Siphesihle Mchunu - 491465	M1
10065	R	Check that ALL doors are OPEN		OK		Siphesihle Mchunu - 491465	M1

10066	I	Door Auth Left Train Lines Dev1/56 = END1 90XR25 pin 85 Dev5/64 = END2 90XP35 pin 85		OK		Siphesihle Mchunu - 491465	M1
10067	A	Force [NI] Dev1/56 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10068	R	Read Defined Variable [NI] Dev5/64 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10069	I	Door Auth Right Train Lines Dev1/64 = END1 90XR25 pin 84 Dev5/56 = END2 90XP35 pin 84		OK		Siphesihle Mchunu - 491465	M1
10070	A	Force [NI] Dev1/64 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10071	R	Read Defined Variable [NI] Dev5/56 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10072	R	Check that ALL doors are CLOSED		OK		Siphesihle Mchunu - 491465	M1
10073	I	Safety Doors Loop Train Lines Dev1/59 = END1 90XR25 pin 96 Dev5/89 = END2 90XP35 pin 96		OK		Siphesihle Mchunu - 491465	M1
10074	A	Force [NI] Dev1/59 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10075	R	Read Defined Variable [NI] Dev5/89 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10076	I	Left Side Doors		OK		Siphesihle Mchunu - 491465	M1
10077	I	Door 1		OK		Siphesihle Mchunu - 491465	M1
10078	I	Door Auth Left Train Lines Dev1/56 = END1 90XR25 pin 85		OK		Siphesihle Mchunu - 491465	M1
10079	A	Force [NI] Dev1/56 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10080	R	Check if ALL Left doors open in 3 sec (+1/-0)		OK		Siphesihle Mchunu - 491465	M1
10081	R	Check that the GREEN leds on both sides of the door blink while the door opens [Safety Request: Prasa8-05]		OK		Siphesihle Mchunu - 491465	M1
10082	I	Door Opening Gap		OK		Siphesihle Mchunu - 491465	M1
10083	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Siphesihle Mchunu - 491465	M1
10084	R	Door 1 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1393	Siphesihle Mchunu - 491465	M1
10085	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Siphesihle Mchunu - 491465	M1

10086	R	Door 1 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1403	Siphesihle Mchunu - 491465	M1
10087	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Siphesihle Mchunu - 491465	M1
10088	R	Door 1 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1400	Siphesihle Mchunu - 491465	M1
10089	I	Door 3		OK		Siphesihle Mchunu - 491465	M1
10090	I	Door Opening Gap		OK		Siphesihle Mchunu - 491465	M1
10091	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Siphesihle Mchunu - 491465	M1
10092	R	Door 3 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1396	Siphesihle Mchunu - 491465	M1
10093	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Siphesihle Mchunu - 491465	M1
10094	R	Door 3 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1406	Siphesihle Mchunu - 491465	M1
10095	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Siphesihle Mchunu - 491465	M1
10096	R	Door 3 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1403	Siphesihle Mchunu - 491465	M1
10097	I	Door 5		OK		Siphesihle Mchunu - 491465	M1
10098	I	Door Opening Gap		OK		Siphesihle Mchunu - 491465	M1
10099	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Siphesihle Mchunu - 491465	M1
10100	R	Door 5 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1394	Siphesihle Mchunu - 491465	M1
10101	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Siphesihle Mchunu - 491465	M1
10102	R	Door 5 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1403	Siphesihle Mchunu - 491465	M1
10103	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door).		OK		Siphesihle Mchunu - 491465	M1
10104	R	Door 5 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1401	Siphesihle Mchunu - 491465	M1
10105	I	Door Auth Left Train Lines Dev1/56 = END1 90XR15 pin 85		OK		Siphesihle Mchunu - 491465	M1

10106	A	Force [NI] Dev1/56 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10107	R	Check if ALL Left doors close in 3 sec (+1/-0)		OK		Siphesihle Mchunu - 491465	M1
10108	R	Check that the RED leds on both sides of the door blink while the door closes [Safety Request: Prasa8-05]		OK		Siphesihle Mchunu - 491465	M1
10109	I	Safety Doors Loop Train Lines Dev5/89 = END2 90XP35 pin 96		OK		Siphesihle Mchunu - 491465	M1
10110	R	Read Defined Variable [NI] Dev5/89 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10111	I	Right Side Doors		OK		Siphesihle Mchunu - 491465	M1
10112	I	Door 2		OK		Siphesihle Mchunu - 491465	M1
10113	I	Door Auth Right Train Lines Dev1/64 = END1 90XR25 pin 84		OK		Siphesihle Mchunu - 491465	M1
10114	A	Force [NI] Dev1/64 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10115	R	Check if ALL Left doors open in 3 sec (+1/-0)		OK		Siphesihle Mchunu - 491465	M1
10116	R	Check that the GREEN leds on both sides of the door blink while the door opens [Safety Request: Prasa8-05]		OK		Siphesihle Mchunu - 491465	M1
10117	I	Door Opening Gap		OK		Siphesihle Mchunu - 491465	M1
10118	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Siphesihle Mchunu - 491465	M1
10119	R	Door 2 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1395	Siphesihle Mchunu - 491465	M1
10120	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Siphesihle Mchunu - 491465	M1
10121	R	Door 2 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1406	Siphesihle Mchunu - 491465	M1
10122	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Siphesihle Mchunu - 491465	M1
10123	R	Door 2 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1402	Siphesihle Mchunu - 491465	M1
10124	I	Door 4		OK		Siphesihle Mchunu - 491465	M1
10125	I	Door Opening Gap		OK		Siphesihle Mchunu - 491465	M1

10126	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Siphesihle Mchunu - 491465	M1
10127	R	Door 4 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1394	Siphesihle Mchunu - 491465	M1
10128	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Siphesihle Mchunu - 491465	M1
10129	R	Door 4 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1404	Siphesihle Mchunu - 491465	M1
10130	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Siphesihle Mchunu - 491465	M1
10131	R	Door 4 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1401	Siphesihle Mchunu - 491465	M1
10132	I	Door 6		OK		Siphesihle Mchunu - 491465	M1
10133	I	Door Opening Gap		OK		Siphesihle Mchunu - 491465	M1
10134	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Siphesihle Mchunu - 491465	M1
10135	R	Door 6 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1393	Siphesihle Mchunu - 491465	M1
10136	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Siphesihle Mchunu - 491465	M1
10137	R	Door 6 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1402	Siphesihle Mchunu - 491465	M1
10138	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Siphesihle Mchunu - 491465	M1
10139	R	Door 6 gap Result Min/Max: 1390<= x <= 1410 (mm)		OK	1399	Siphesihle Mchunu - 491465	M1
10140	I	Obstacle Detection		OK		Siphesihle Mchunu - 491465	M1
10141	I	Door Auth Left Train Lines Dev1/56 = END1 90XR25 pin 85		OK		Siphesihle Mchunu - 491465	M1
10142	A	Force [NI] Dev1/56 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10143	R	Check if ALL Left doors open in 3 sec (+1/- 0)		OK		Siphesihle Mchunu - 491465	M1
10144	R	Position an obstacle on the floor in the centre of each and every door closing line		OK		Siphesihle Mchunu - 491465	M1
10145	I	Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right)		OK		Siphesihle Mchunu - 491465	M1

		Dev1/56 = END1 90XR25 pin 85 (Left)					
10146	A	Force [NI] Dev1/64 = 0.0		OK		Siphehile Mchunu - 491465	M1
10147	A	Force [NI] Dev1/56 = 0.0		OK		Siphehile Mchunu - 491465	M1
10148	R	All doors will hit the obstacles, reopen and try to close again 3 times. On the third attempt ALL doors will stop and stand ajar - free to be opened manually		OK		Siphehile Mchunu - 491465	M1
10149	I	Safety Doors Loop Train Lines Dev5/89 = END2 90XP35 pin 96		OK		Siphehile Mchunu - 491465	M1
10150	R	Read Defined Variable [NI] Dev5/89 = 0.0		OK	0	Siphehile Mchunu - 491465	M1
10151	I	Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right) Dev1/56 = END1 90XR25 pin 85 (Left)		OK		Siphehile Mchunu - 491465	M1
10152	A	Force [NI] Dev1/64 = 1.0		OK		Siphehile Mchunu - 491465	M1
10153	A	Force [NI] Dev1/56 = 1.0		OK		Siphehile Mchunu - 491465	M1
10154	R	ALL doors open fully		OK		Siphehile Mchunu - 491465	M1
10155	A	Remove the obstacles		OK		Siphehile Mchunu - 491465	M1
10156	I	Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right) Dev1/56 = END1 90XR25 pin 85 (Left)		OK		Siphehile Mchunu - 491465	M1
10157	A	Force [NI] Dev1/64 = 0.0		OK		Siphehile Mchunu - 491465	M1
10158	A	Force [NI] Dev1/56 = 0.0		OK		Siphehile Mchunu - 491465	M1
10159	R	Check that ALL doors close in 3 sec (+1/-0)		OK		Siphehile Mchunu - 491465	M1
10160	R	Check that the RED leds on both sides of the door blink while the door closes [Safety Request: Prasa8-05]		OK		Siphehile Mchunu - 491465	M1
10161	I	Safety Doors Loop Train Lines Dev5/89 = END2 90XP35 pin 96		OK		Siphehile Mchunu - 491465	M1
10162	R	Read Defined Variable [NI] Dev5/89 = 1.0		OK	1	Siphehile Mchunu - 491465	M1
10163	I	Speed Detection		OK		Siphehile Mchunu - 491465	M1
10164	I	Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right) Dev1/56 = END1 90XR25 pin 85 (Left)		OK		Siphehile Mchunu - 491465	M1

10165	A	Force [NI] Dev1/64 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10166	A	Force [NI] Dev1/56 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10167	R	All doors open		OK		Siphesihle Mchunu - 491465	M1
10168	I	V>5km/h Train Lines Dev1/34 = END1 90XR25 pin 28 Dev5/38 = END2 90XP35 pin 28		OK		Siphesihle Mchunu - 491465	M1
10169	A	Force [NI] Dev1/34 = 1.0		OK		Siphesihle Mchunu - 491465	M1
10170	R	Read Defined Variable [NI] Dev5/38 = 1.0		OK	1	Siphesihle Mchunu - 491465	M1
10171	R	All doors close due to the invalid state of the DCU		OK		Siphesihle Mchunu - 491465	M1
10172	A	Release [TT] (MPU1) lo_dor_m1opendoorleft		OK		Siphesihle Mchunu - 491465	M1
10173	A	Release [TT] (MPU1) lo_dor_m1opendoorright		OK		Siphesihle Mchunu - 491465	M1
10174	I	V>5km/h Train Lines Dev1/34 = END1 90XR25 pin 28 Dev5/38 = END2 90XP35 pin 28		OK		Siphesihle Mchunu - 491465	M1
10175	A	Force [NI] Dev1/34 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10176	R	Read Defined Variable [NI] Dev5/38 = 0.0		OK	0	Siphesihle Mchunu - 491465	M1
10177	I	V<3km/h Train Lines Dev1/35 = END1 90XR25 pin 29		OK		Siphesihle Mchunu - 491465	M1
10178	A	Force [NI] Dev1/35 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10179	I	Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right) Dev1/56 = END1 90XR25 pin 85 (Left)		OK		Siphesihle Mchunu - 491465	M1
10180	A	Force [NI] Dev1/64 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10181	A	Force [NI] Dev1/56 = 0.0		OK		Siphesihle Mchunu - 491465	M1
10182	I	Safety Doors Loop Train Lines Dev1/59 = END1 90XR25 pin 96		OK		Siphesihle Mchunu - 491465	M1
10183	A	Force [NI] Dev1/59 = 0.0		OK		Siphesihle Mchunu - 491465	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 13 – Air Conditioning

13.1 Instructions list

13.1.1 057_HVA-HVAC_TK

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Air Conditioning (SPP=057)		OK		Siphehile Mchunu - 491465	M1
10002	I	Initial conditions		OK		Siphehile Mchunu - 491465	M1
10003	A	Car Should be Prepared		OK		Siphehile Mchunu - 491465	M1
10004	I	Power Supply		OK		Siphehile Mchunu - 491465	M1
10005	A	Remove Connector 57XP1_5 from HVAC Panel		OK		Siphehile Mchunu - 491465	M1
10006	A	Close Circuit Breaker 57Q2		OK		Siphehile Mchunu - 491465	M1
10007	A	Force [TT] (MPU1) lo_hva_m1hvacinhibr1__1 = 0.0		OK		Siphehile Mchunu - 491465	M1
10008	A	Force [TT] (MPU1) lo_hva_m1hvacinhibr2__1 = 0.0		OK		Siphehile Mchunu - 491465	M1
10009	R	Check battery voltage (above 80Vdc) between points 11 and 9 of the connector 57XP1_5		OK		Siphehile Mchunu - 491465	M1
10010	A	Force [TT] (MPU1) lo_hva_m1hvacinhibr2__1 = 1.0		OK		Siphehile Mchunu - 491465	M1
10011	R	Check 0Vdc between points 11 and 9 of the connector 57XP1_5		OK		Siphehile Mchunu - 491465	M1
10012	A	Force [TT] (MPU1) lo_hva_m1hvacinhibr1__1 = 1.0		OK		Siphehile Mchunu - 491465	M1
10013	R	Check 0Vdc between points 11 and 9 of the connector 57XP1_5		OK		Siphehile Mchunu - 491465	M1
10014	R	Check 0Vdc between points 10 and 9 of the connector 57XP1_5		OK		Siphehile Mchunu - 491465	M1
10015	A	Force [TT] (MPU1) lo_hva_m1hvacinhibr2__1 = 0.0		OK		Siphehile Mchunu - 491465	M1
10016	A	Force [TT] (MPU1) lo_hva_m1emergventil__1 = 1.0		OK		Siphehile Mchunu - 491465	M1
10017	R	Check 0Vdc between points 11 and 9 of the connector 57XP1_5		OK		Siphehile Mchunu - 491465	M1

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

10018	R	Check battery voltage (above 80Vdc) between points 10 and 9 of the connector 57XP1_5		OK		Siphesihle Mchunu - 491465	M1
10019	A	Release [TT] (MPU1) lo_hva_m1emergventil__1		OK		Siphesihle Mchunu - 491465	M1
10020	A	Release [TT] (MPU1) lo_hva_m1hvacinhibr1__1		OK		Siphesihle Mchunu - 491465	M1
10021	A	Release [TT] (MPU1) lo_hva_m1hvacinhibr2__1		OK		Siphesihle Mchunu - 491465	M1
10022	A	Return back the connector 57XP1_5 on the HVAC panel		OK		Siphesihle Mchunu - 491465	M1
10023	I	HVAC Electronic Power Supply		OK		Siphesihle Mchunu - 491465	M1
10024	A	Close Circuit Breaker F1 on the HVAC Panel		OK		Siphesihle Mchunu - 491465	M1
10025	A	Turn the control switch to AUTO position on the HVAC Panel		OK		Siphesihle Mchunu - 491465	M1
10026	R	The HVAC electronic is ON		OK		Siphesihle Mchunu - 491465	M1
10027	A	Open Circuit Breaker F1 on the HVAC Panel		OK		Siphesihle Mchunu - 491465	M1
10028	R	The HVAC electronic is OFF		OK		Siphesihle Mchunu - 491465	M1
10029	A	Close Circuit Breaker F1 on the HVAC Panel		OK		Siphesihle Mchunu - 491465	M1
10030	I	Software Upload		OK		Siphesihle Mchunu - 491465	M1
10031	I	Follow the procedure in the document below to upload software onto the HVAC electronic		OK		Siphesihle Mchunu - 491465	M1
10032	A			OK		Siphesihle Mchunu - 491465	M1
10033	A			OK		Siphesihle Mchunu - 491465	M1
10034	I	Sensor's Grade		OK		Siphesihle Mchunu - 491465	M1
10035	I	Each temperature sensor has calibrated grade information. The sensor must be setup with this information.		OK		Siphesihle Mchunu - 491465	M1
10036	A	The label with sensor grade information is found inside the HVAC frame, near the filter. Inside the train, open the ceiling filter access, rotate a damper, and read		OK		Siphesihle Mchunu - 491465	M1

		the label.					
10037	R	Sensor grade for HVAC Return Air (RAS) is:		OK	6L	Siphesihle Mchunu - 491465	M1
10038	R	Sensor grade for HVAC Duct Air (DAS) is:		OK	4	Siphesihle Mchunu - 491465	M1
10039	R	Sensor grade for HVAC Fresh Air (FAS) is:		OK	2L	Siphesihle Mchunu - 491465	M1
10040	R	Sensor grade for HVAC Duct Air 2 (DAS2) is:		OK	5	Siphesihle Mchunu - 491465	M1
10041	A	In the maintenance software, select the "Application settings" page and click the "Sensors" tab		OK		Siphesihle Mchunu - 491465	M1
10042	A	Enter the data found on the label for each grade. Then, click "Save settings"		OK		Siphesihle Mchunu - 491465	M1
10043	A	Open Circuit Breaker F1 on the HVAC Panel		OK		Siphesihle Mchunu - 491465	M1
10044	I	Checking 400Vac		OK		Siphesihle Mchunu - 491465	M1
10045	A	Ensure that the 400Vac Shore Supply is connected to the vehicle, else connect it		OK		Siphesihle Mchunu - 491465	M1
10046	A	Close Circuit Breaker 57Q1		OK		Siphesihle Mchunu - 491465	M1
10047	A	Measure 400Vac (+-5%) in the Terminal Block next to the connector '57XP1_10. A / '57XP1_10. B' on the HVAC Panel		OK		Siphesihle Mchunu - 491465	M1
10048	R	400Vac (+-5%) measured		OK		Siphesihle Mchunu - 491465	M1
10049	A	On the HVAC Panel, with a phasemeter, check the correct Phase Rotation between points L1- Phase R, L2- Phase S and L3- Phase T.		OK		Siphesihle Mchunu - 491465	M1
10050	R	The phase rotation is correct between all three phases		OK		Siphesihle Mchunu - 491465	M1
10051	I	Saloon HVAC		OK		Siphesihle Mchunu - 491465	M1
10052	A	Close Circuit Breaker F1 on the HVAC Panel		OK		Siphesihle Mchunu - 491465	M1
10053	A	Force [TT] (MPU1) lo_hva_m1hvacinhibr1__1 = 1		OK		Siphesihle Mchunu - 491465	M1
10054	A	Force [TT] (MPU1) lo_hva_m1hvacinhibr2__1 = 1		OK		Siphesihle Mchunu - 491465	M1

10055	I	HVAC 50% restriction		OK		Siphehile Mchunu - 491465	M1
10056	A	Force [TT] NRG_HvacM150Cmd = 0		OK		Siphehile Mchunu - 491465	M1
10057	R	HVAC unit turns ON and starts to work		OK		Siphehile Mchunu - 491465	M1
10058	I	Reconnect the laptop to the HVAC maintenance software using HCU Finder		OK		Siphehile Mchunu - 491465	M1
10059	R	The Exhaust fans are Turned Off (Confirm on Forced tab that Actual exhauster speed is OFF)		OK		Siphehile Mchunu - 491465	M1
10060	I	Forced Mode (Saloon HVAC)		OK		Siphehile Mchunu - 491465	M1
10061	I	For the next sections, walk through the whole car and physically check (feel) that the HVAC is functioning as desired		OK		Siphehile Mchunu - 491465	M1
10062	I	In the maintenance software, select the 'Forced' tab, and use the "Required working mode" drop down box to force the following modes:		OK		Siphehile Mchunu - 491465	M1
10063	I	Ventilation Mode		OK		Siphehile Mchunu - 491465	M1
10064	A	Force Ventilation mode on the Saloon HVAC		OK		Siphehile Mchunu - 491465	M1
10065	R	All saloon HVAC units work in Ventilation mode. Not heating/cooling		OK		Siphehile Mchunu - 491465	M1
10066	R	The Exhaust fans are Turned OFF		OK		Siphehile Mchunu - 491465	M1
10067	I	Cooling Mode		OK		Siphehile Mchunu - 491465	M1
10068	A	Force Cooling mode on the Saloon HVAC		OK		Siphehile Mchunu - 491465	M1
10069	R	All saloon HVAC units work in Cooling mode		OK		Siphehile Mchunu - 491465	M1
10070	R	The Exhaust fans are Turned OFF		OK		Siphehile Mchunu - 491465	M1
10071	I	Heating Mode		OK		Siphehile Mchunu - 491465	M1
10072	A	Force Heating mode on the Saloon HVAC		OK		Siphehile Mchunu - 491465	M1
10073	R	All saloon HVAC units work in Heating mode		OK		Siphehile Mchunu - 491465	M1
10074	R	The Exhaust fans are Turned OFF		OK		Siphehile Mchunu - 491465	M1

 
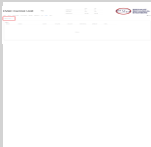 
10075	I	Self-Test		OK		Siphehile Mchunu - 491465	M1
10076	A	Force Self-Test on the Saloon HVAC		OK		Siphehile Mchunu - 491465	M1
10077	R	All saloon HVAC units work according to the mode described in the "Actual working mode"		OK		Siphehile Mchunu - 491465	M1
10078	R	The Exhaust fans are Turned OFF		OK		Siphehile Mchunu - 491465	M1
10079	I	HVAC Faults		OK		Siphehile Mchunu - 491465	M1
10080	A	Open Circuit Breaker 57Q1		OK		Siphehile Mchunu - 491465	M1
10081	R	All saloon HVAC units STOP working		OK		Siphehile Mchunu - 491465	M1
10082	A	Close Circuit Breaker 57Q1		OK		Siphehile Mchunu - 491465	M1
10083	R	All saloon HVAC units START working		OK		Siphehile Mchunu - 491465	M1
10084	A	In the maintenance software, select the "Alarms / Warnings" tab		OK		Siphehile Mchunu - 491465	M1
10085	A	Ensure there are no active faults on the HVAC		OK		Siphehile Mchunu - 491465	M1
10086	R	No active faults identified on the HVAC unit		OK		Siphehile Mchunu - 491465	M1
10087	A	Release [TT] (MPU1) lo_hva_m1hvacinhibr1__1		OK		Siphehile Mchunu - 491465	M1
10088	A	Release [TT] (MPU1) lo_hva_m1hvacinhibr2__1		OK		Siphehile Mchunu - 491465	M1
10089	A	Release [TT] NRG_HvacM150Cmd		OK		Siphehile Mchunu - 491465	M1

13.1.2 057_HVA_SME-HVAC_SME

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	HVA_057 Air Conditioning		NE			M1
10002	I	Initial conditions		NE			M1
10003	A	Car Should be Prepared with CVS running and 400V ac available in the car		NE			M1
10004	I	HVAC AC Power Supply		NE			M1
10005	A	Close Circuit Breaker 13Q1 and 13Q5		NE			M1
10006	A	Check on the DDU if the HVAC is offline		NE			M1
10007	I	Checking 400Vac		NE			M1
10008	A	Close Circuit Breaker 57Q1		NE			M1
10009	A	Disconnect connector 57XP4_X5 and Measure 400Vac between all 3 phases which are a1- phase R, a2- Phase S and b1- phase T of connector 57XP4_X5		NE			M1
10010	R	400Vac measured between all phases		NE			M1
10011	A	On the same connector 57XP4_X5, with a phasemeter, check the correct Phase Rotation between points a1- Phase R, a2- Phase S and b1- Phase T.		NE			M1
10012	R	The phase rotation is correct between all three phases		NE			M1
10013	I	Saloon HVAC		NE			M1
10014	A	Close Circuit Breaker 57Q2		NE			M1
10015	A	Allow the HVAC to initialize and check on the DDU if the HVAC is online		NE			M1
10016	R	HVAC unit is online and starts to work		NE			M1
10017	I	HVAC web portal		NE			M1
10018	A	The attached document is a procedure on how to navigate around the maintenance		NE			M1

		software.					
10019	I	Connect the laptop to the HVAC maintenance software using web browser. Enter the following IP address on the web browser 10.136.xxx.29 xxx represents the train number Login: maint Password: maint		NE			M1
10020	R	On status tab, Active mode is off for both cab and saloon		NE			M1
10021	A	Go to Alarms tab and clear all the alarms for saloon and cabin		NE			M1
10022	I	HVAC inhib		NE			M1
10023	A	Force [TT] (MPU1) lo_hva_m1hvacinhibr1__1 = 1.0		NE			M1
10024	A	Force [TT] (MPU1) lo_hva_m1hvacinhibr2__1 = 1.0		NE			M1
10025	I	HVAC 50% Restriction		NE			M1
10026	A	Force [TT] NRG_HvacM150Cmd = 0		NE			M1
10027	I	Full "Self-test" saloon		NE			M1
10028	I	For the following tests make sure on the webHMI tab you change controller to be controlled by webHMI and not MPU		NE			M1
10029	A	Before running the full test, please click on reset test to reset the previous results.		NE			M1
10030	A	Select Full-Test on the Saloon HVAC		NE			M1
10031	R	All saloon HVAC units work according to the mode described in the "ACTIVE MODE" on the status tab		NE			M1
10032	R	When the test is complete, please check if the status is showing as "TEST PASS" and the test took 3 mins +/- 2 seconds for each mode.		NE			M1
10033	I	Forced Mode (Saloon HVAC)		NE			M1
10034	I	During all tests Walk through the whole car and physically check (feel) that the HVAC is functioning as desired		NE			M1

10035	I	Go to maintenance tab to force the following modes		NE			M1
10036	I	Cooling Mode		NE			M1
10037	A	Select forced Cooling mode on the Saloon HVAC and let it run for 5 mins		NE			M1
10038	R	All HVAC units are cooling		NE			M1
10039	I	Heating Mode		NE			M1
10040	A	Select forced Heating mode on the Saloon HVAC and let it run for 5 mins		NE			M1
10041	R	All HVAC units are heating		NE			M1
10042	I	HVAC Faults		NE			M1
10043	A	In the maintenance software, select the "Alarms" tab		NE			M1
10044	A	Ensure there are no active faults on the HVAC for Saloon. Use the highlighted drop down to navigate between saloon and cabin.		NE			M1
10045	R	No active faults identified on the HVAC unit		NE			M1
10046	A	Release [TT] (MPU1) lo_hva_m1hvacinhibr1__1		NE			M1
10047	A	Release [TT] (MPU1) lo_hva_m1hvacinhibr2__1		NE			M1
10048	A	Release [TT] NRG_HvacM150Cmd		NE			M1
10049	I	End of test		NE			M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 14 – Fire protection

14.1 Instructions list

14.1.1 067_FSD-Fire Protection

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Fire Protection System (SPP=067)		OK		Anthonia Mabowa - 494131	M1
10002	I	Fire Detection Train Lines		OK		Anthonia Mabowa - 494131	M1
10003	I	Fire Detection Train Lines Dev1/76 = END1 90XR24 pin 21 Dev5/76 = END2 90XP34 pin 21		OK		Anthonia Mabowa - 494131	M1
10004	A	Force [NI] Dev1/76 = 1.0		OK		Anthonia Mabowa - 494131	M1
10005	R	Read Defined Variable [NI] Dev5/76 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10006	A	Force [NI] Dev1/76 = 0.0		OK		Anthonia Mabowa - 494131	M1
10007	R	Read Defined Variable [NI] Dev5/76 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10008	I	Continuity Test		OK		Mbavhalelo Funyufunyu - 484649	M1
10009	I	The following steps are continuity tests between the two points described in each step. Use a multi-meter for this test.		OK		Mbavhalelo Funyufunyu - 484649	M1
10010	A	From: [(local: +END1 -90XR23.B (pin 4))] to: [-Inter-connector (local: +END2 -90XP33.a pin 7)]		OK		Mbavhalelo Funyufunyu - 484649	M1
10011	A	From: [(local: +END1 -90XR23.B (pin 5))] to: [-Inter-connector (local: +END2 -90XP33.a pin 8)]		OK		Mbavhalelo Funyufunyu - 484649	M1
10012	A	From: [(local: +END1 -90XR23.A (pin 7))] to: [-Inter-connector (local: +END2 -90XP33.b pin 4)]		OK		Mbavhalelo Funyufunyu - 484649	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

10013	A	From: [(local: +END1 -90XR23.A (pin 8))] to: [-Inter-connector (local: +END2 - 90XP33.b pin 5)]		OK		Mbavhalelo Funyufunyu - 484649	M1
-------	---	---	--	----	--	-----------------------------------	----



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 15 – Traction and Electric Brake

15.1 Instructions list

15.1.1 033_TRC-Traction and Electric Brake

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Traction and Electric Brake (SPP=033)		OK		Anthonia Mabowa - 494131	M1
10002	I	Circuit Breakers and Configuration		OK		Anthonia Mabowa - 494131	M1
10003	A	Close Circuit Breaker 33Q1		OK		Anthonia Mabowa - 494131	M1
10004	A	Close Circuit Breaker 33Q2		OK		Anthonia Mabowa - 494131	M1
10005	A	Close Circuit Breaker 33Q3		OK		Anthonia Mabowa - 494131	M1
10006	A	Close Circuit Breaker 33Q4		OK		Anthonia Mabowa - 494131	M1
10007	A	Close Circuit Breaker 33Q5		OK		Anthonia Mabowa - 494131	M1
10008	R	Read Defined Variable [TT] (TBCU1) LI_CAR_ID1 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10009	I	Train Lines		OK		Anthonia Mabowa - 494131	M1
10010	I	110Vdc Normal Traction EL Train Lines Dev 1/66 = END1 90XP25 pin 49 Dev 2/65 = END1 90XP35 pin 42		OK		Anthonia Mabowa - 494131	M1
10011	A	Force [NI] Dev1/66 = 1.0		OK		Anthonia Mabowa - 494131	M1
10012	R	Read Defined Variable [NI] Dev2/65 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10013	A	Force [NI] Dev1/66 = 0.0		OK		Anthonia Mabowa - 494131	M1
10014	R	Read Defined Variable [NI] Dev2/65 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10015	I	Forward Train Lines: Dev1/31: END1 90XR25 pin 25 Dev5/78: END2 90XP35 pin 30		OK		Anthonia Mabowa - 494131	M1
10016	A	Force [NI] Dev1/31 = 1.0		OK		Anthonia Mabowa - 494131	M1
10017	R	Read Defined Variable [TT] (TBCU1) LI_FORWARD = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10018	R	Read Defined Variable [NI] Dev5/78 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10019	I	Forward Train Lines: Dev1/31: END1 90XR25 pin 25 Dev5/78: END2 90XP35 pin 30		OK		Anthonia Mabowa - 494131	M1

10020	A	Force [NI] Dev1/31 = 0.0		OK		Anthonia Mabowa - 494131	M1
10021	R	Read Defined Variable [TT] (TBCU1) LI_FORWARD = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10022	R	Read Defined Variable [NI] Dev5/78 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10023	I	Reverse Train Lines: Dev1/36: END1 90XR25 pin 30 Dev5/35: END2 90XP35 pin 25		OK		Anthonia Mabowa - 494131	M1
10024	A	Force [NI] Dev1/36 = 1.0		OK		Anthonia Mabowa - 494131	M1
10025	R	Read Defined Variable [TT] (TBCU1) LI_REVERSE = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10026	R	Read Defined Variable [NI] Dev5/35 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10027	I	Reverse Train Lines: Dev1/36: END1 90XR25 pin 30 Dev5/35: END2 90XP35 pin 25		OK		Anthonia Mabowa - 494131	M1
10028	A	Force [NI] Dev1/36 = 0.0		OK		Anthonia Mabowa - 494131	M1
10029	R	Read Defined Variable [TT] (TBCU1) LI_REVERSE = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10030	R	Read Defined Variable [NI] Dev5/35 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10031	I	Traction Train Lines: Dev1/37: END1 90XR25 pin 31 Dev5/81: END2 90XP35 pin 31		OK		Anthonia Mabowa - 494131	M1
10032	A	Force [NI] Dev1/37 = 1.0		OK		Anthonia Mabowa - 494131	M1
10033	R	Read Defined Variable [TT] (TBCU1) LI_TRACTION = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10034	R	Read Defined Variable [NI] Dev5/81 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10035	I	Traction Train Lines: Dev1/37: END1 90XR25 pin 31 Dev5/81: END2 90XP35 pin 31		OK		Anthonia Mabowa - 494131	M1
10036	A	Force [NI] Dev1/37 = 0.0		OK		Anthonia Mabowa - 494131	M1
10037	R	Read Defined Variable [TT] (TBCU1) LI_TRACTION = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10038	R	Read Defined Variable [NI] Dev5/81 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10039	I	No Brake Train Lines: Dev1/38: END1 90XR25 pin 32 Dev5/82: END2 90XP35 pin 32		OK		Anthonia Mabowa - 494131	M1

10040	A	Force [NI] Dev1/38 = 1.0		OK		Anthonia Mabowa - 494131	M1
10041	R	Read Defined Variable [TT] (TBCU1) LI_NOBRAKE = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10042	R	Read Defined Variable [NI] Dev5/82 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10043	I	No Brake Train Lines: Dev1/38: END1 90XR25 pin 32 Dev5/82: END2 90XP35 pin 32		OK		Anthonia Mabowa - 494131	M1
10044	A	Force [NI] Dev1/38 = 0.0		OK		Anthonia Mabowa - 494131	M1
10045	R	Read Defined Variable [TT] (TBCU1) LI_NOBRAKE = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10046	R	Read Defined Variable [NI] Dev5/82 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10047	I	Traction Interlock Bypass Train Lines Dev1/4: END1 90XR24 pin 6 Dev5/4: END2 90XP34 pin 6		OK		Anthonia Mabowa - 494131	M1
10048	A	Force [NI] Dev1/4 = 1.0		OK		Anthonia Mabowa - 494131	M1
10049	R	Read Defined Variable [NI] Dev5/4 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10050	A	Force [NI] Dev1/4 = 0.0		OK		Anthonia Mabowa - 494131	M1
10051	R	Read Defined Variable [NI] Dev5/4 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10052	I	Traction Interlock Train Lines Dev1/39: END1 90XR25 pin 41 Dev5/83: END2 90XP35 pin 41		OK		Anthonia Mabowa - 494131	M1
10053	A	Force [NI] Dev1/39 = 1.0		OK		Anthonia Mabowa - 494131	M1
10054	R	Read Defined Variable [TT] (TBCU1) LI_NOT_INHIB = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10055	R	Read Defined Variable [NI] Dev5/83 = 1.0		OK	1	Anthonia Mabowa - 494131	M1
10056	I	Traction Interlock Train Lines Dev1/39: END1 90XR25 pin 41 Dev5/83: END2 90XP35 pin 41		OK		Anthonia Mabowa - 494131	M1
10057	A	Force [NI] Dev1/39 = 0.0		OK		Anthonia Mabowa - 494131	M1
10058	R	Read Defined Variable [TT] (TBCU1) LI_NOT_INHIB = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10059	R	Read Defined Variable [NI] Dev5/83 = 0.0		OK	0	Anthonia Mabowa - 494131	M1
10060	I	Coolant Liquid		OK		Anthonia Mabowa - 494131	M1

10061	A	Check that the coolant level is atleast 1/2 of the sight glass level indicator		OK		Anthonia Mabowa - 494131	M1
10062	R	Coolant Liquid Level is OK		OK		Anthonia Mabowa - 494131	M1
10063	I	End of Test		OK		Anthonia Mabowa - 494131	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 16 – Vehicle Normalization

16.1 Instructions list

16.1.1 NORM-Vehicle Normalization

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Initial Conditions		OK		Anthonia Mabowa - 494131	M1
10002	I	The VFT procedures are all completed		OK		Anthonia Mabowa - 494131	M1
10003	I	Vehicle Normalization Check		OK		Anthonia Mabowa - 494131	M1
10004	R	On LV3 all Circuit Breakers are installed and secured		OK		Anthonia Mabowa - 494131	M1
10005	R	On LV3 all Dataplugs are installed, tightened and earth braids are fastened		OK		Walter Sigudla - 486333	M1
10006	R	On LV3 all Connectors are tightened		OK		Anthonia Mabowa - 494131	M1
10007	R	On LV3 there are no missing components, device, wiring or connectors.		OK		Anthonia Mabowa - 494131	M1
10008	A	ON LV3, make sure that both bolts on 93XT300 terminal 4 are tightened and torque marked.		OK		Anthonia Mabowa - 494131	M1
10009	R	On LV6 all Dataplugs are installed, tightened and earth braids are fastened		OK		Walter Sigudla - 486333	M1
10010	R	On LV6 all Connectors are tightened		OK		Anthonia Mabowa - 494131	M1
10011	R	On LV6 there are no missing components, device, wiring or connectors.		OK		Anthonia Mabowa - 494131	M1
10012	R	On HC Cubicle the Controller is installed and properly tightened and its connectors are tightened		OK		Anthonia Mabowa - 494131	M1
10013	R	All DCUs are properly installed and secured		OK		Anthonia Mabowa - 494131	M1
10014	R	All Internal Displays are properly installed and secured		OK		Anthonia Mabowa - 494131	M1
10015	R	All Light Covers are properly installed		OK		Anthonia Mabowa - 494131	M1
10016	R	All Saloon Fire Detectors are properly installed and secured		OK		Anthonia Mabowa - 494131	M1
10017	R	All covers are normalised inside the car		OK		Walter Sigudla - 486333	M1

10018	R	On the Underframe, TBCU Agate is installed and properly tightened		OK		Anthonia Mabowa - 494131	M1
10019	R	On the Underframe, Auxiliary Compressor cover is normalized		OK		Anthonia Mabowa - 494131	M1
10020	R	On the Underframe, Panto panel cover is normalized		OK		Anthonia Mabowa - 494131	M1
10021	R	On the Underframe, Speed Sensors are installed and properly tightened		OK		Anthonia Mabowa - 494131	M1
10022	R	On the LVB, all Circuit Breakers are installed and properly tightened		OK		Anthonia Mabowa - 494131	M1
10023	R	On the LVB, all Relays and Timers are installed and properly tightened		OK		Anthonia Mabowa - 494131	M1
10024	R	On the LVB, BRIOMs are installed and properly tightened		OK		Anthonia Mabowa - 494131	M1
10025	R	On the LVB there are no missing components, device, wiring or connectors.		OK		Anthonia Mabowa - 494131	M1
10026	R	On the Underframe, all Connectors are tightened		OK		Anthonia Mabowa - 494131	M1
10027	R	All underframe covers are normalised		OK		Anthonia Mabowa - 494131	M1
10028	R	On END1 the Octopus cables are disconnected from the car and properly stored.		OK		Anthonia Mabowa - 494131	M1
10029	R	On END2 the Octopus cables are disconnected from the car and properly stored.		OK		Anthonia Mabowa - 494131	M1
10030	R	On the roof, there is no Strap connected to the Pantograph		OK		Anthonia Mabowa - 494131	M1
10031	R	The Test Bench is switched OFF and the Octopus cables are disconnected and properly stored		OK		Anthonia Mabowa - 494131	M1
10032	R	ALL P. Os of this car are closed		OK		Walter Sigudla - 486333	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 17 – PACIS Network

17.1 Instructions list

17.1.1 054_PIS-PACIS Network

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	PACIS System (SPP=054)		OK		Tebogo Mtombeni - 529938	M1
10002	I	Initial conditions		OK		Tebogo Mtombeni - 529938	M1
10003	I	110Vdc Normal line is connected and ON		OK		Tebogo Mtombeni - 529938	M1
10004	I	Circuit Breakers		OK		Tebogo Mtombeni - 529938	M1
10005	A	Close Circuit Breaker 54Q1		OK		Tebogo Mtombeni - 529938	M1
10006	A	Close Circuit Breaker 54Q2		OK		Tebogo Mtombeni - 529938	M1
10007	A	Close Circuit Breaker 54Q10		OK		Tebogo Mtombeni - 529938	M1
10008	A	Close Circuit Breaker 54Q11		OK		Tebogo Mtombeni - 529938	M1
10009	A	Close Circuit Breaker 55Q2		OK		Tebogo Mtombeni - 529938	M1
10010	A	Close Circuit Breaker 55Q3		OK		Tebogo Mtombeni - 529938	M1
10011	R	All 'Pacis System' circuit breakers are closed		OK		Tebogo Mtombeni - 529938	M1
10012	I	Power Supply of Router Switches		OK		Tebogo Mtombeni - 529938	M1
10013	I	Ethernet Switch CRS1		OK		Tebogo Mtombeni - 529938	M1
10014	R	CRS1 is ON		OK		Tebogo Mtombeni - 529938	M1
10015	I	Ethernet Switch CRS2		OK		Tebogo Mtombeni - 529938	M1
10016	R	CRS2 is ON		OK		Tebogo Mtombeni - 529938	M1
10017	I	DPAI-1		OK		Tebogo Mtombeni - 529938	M1
10018	R	DPAI-1 is ON		OK		Tebogo Mtombeni - 529938	M1
10019	I	DPAI-2		OK		Tebogo Mtombeni - 529938	M1
10020	R	DPAI-2 is ON		OK		Tebogo Mtombeni - 529938	M1
10021	I	Lateral Display 'LAT1'		OK		Tebogo Mtombeni - 529938	M1

10022	R	The PWR (power) LED is ON on the Lateral Display 'LAT1'		OK		Tebogo Mtombeni - 529938	M1
10023	I	Lateral Display 'LAT2'		OK		Tebogo Mtombeni - 529938	M1
10024	R	The PWR (power) LED is ON on the Lateral Display 'LAT2'		OK		Tebogo Mtombeni - 529938	M1
10025	I	Interior Display 'INT1'		OK		Tebogo Mtombeni - 529938	M1
10026	R	The PWR (power) LED is ON on the Interior Display 'INT1'		OK		Tebogo Mtombeni - 529938	M1
10027	I	Interior Display 'INT2'		OK		Tebogo Mtombeni - 529938	M1
10028	R	The PWR (power) LED is ON on the Interior Display 'INT2'		OK		Tebogo Mtombeni - 529938	M1
10029	I	Impedance of Loudspeaker		OK		Tebogo Mtombeni - 529938	M1
10030	I	Saloon Speakers Commanded by DPAI-1		OK		Tebogo Mtombeni - 529938	M1
10031	A	Measure the impedance connector '54XP1_X4' between pins: z32(+) and z30 (-)		OK		Tebogo Mtombeni - 529938	M1
10032	R	Impedance Result Max: $x \leq 32$ (Ohm)		OK	29.6	Tebogo Mtombeni - 529938	M1
10033	I	Saloon Speakers Commanded by DPAI-2		OK		Tebogo Mtombeni - 529938	M1
10034	A	Measure the impedance connector '54XP2_X4' between pins: z32(+) and z30 (-)		OK		Tebogo Mtombeni - 529938	M1
10035	R	Impedance Result Max: $x \leq 32$ (Ohm)		OK	30.2	Tebogo Mtombeni - 529938	M1



Serial Tests Report
TS235 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000006951
Version: A0

Emission date
23/07/2024

Section 18 – Report summaries

18.1 Results status

Test Instruction Sheet	Compliant	Incomplete	Non-compliant
Vehicle Normalization	X		
Train-Ground Communication	X		
Traction and Electric Brake	X		
TCMS Network	X		
Service Brake	X		
Rescue Mode and Emergency Disconnection	X		
Passenger Doors	X		
Pantograph	X		
PACIS Network	X		
Internal Lighting	X		
Holding and Parking Brake	X		
Fire protection	X		
Energy Distribution	X		
Emergency Brake	X		
Cabin Control	X		
Air Conditioning	X		

18.2 Tools used.

Function	Tool name	Tool number	Next Calibration date
015_NRG	Phasemeter	Phasemeter	8/25/2024
021_PNT	Manometer	Manometer	7/31/2024
040_SBK	Manometer	Manometer	7/31/2024
045_PBK	Manometer	Manometer	7/31/2024
057_HVA	Phasemeter	Phasemeter	8/25/2024
062_ETS	Multi-meter	Multi-meter 2	8/23/2024



064_COM	GSM-R - tester	Radio Analyser	8/23/2024
067_FSD	Multi-meter	Multi-meter 2	8/23/2024

Vehicle	Equipment	Expected version	Version loaded
M1			